

INSTRUCTION MANUAL

For installation, use and maintenance for the

MODELS:

BMS & BTS

**Direct Vent
Space / Water Heater**

**Combined Appliance
For Heating and Domestic Hot Water**



These instructions **MUST** be read prior to installation and left near the appliance when the installation is completed.

Text complies with minimum size requirements.

U.S.A.

SAFETY INSTRUCTIONS

WARNING: If the information in this manual is not followed exactly, a fire or explosion may result causing property damage, personal injury or death.

— Do not store or use gasoline or other flammable vapors and liquids in the vicinity of this or any other appliance.

— **WHAT TO DO IF YOU SMELL GAS**

- Do not try to light any appliance.
- Do not touch any electrical switch; do not use any phone in your building.
- Immediately call your gas supplier from a neighbor's phone. Follow the gas supplier's instructions.
- If you cannot reach your gas supplier, call the fire department.

— Installation and service must be performed by a qualified installer, service agency or the gas supplier.

FOR YOUR SAFETY

Do not store or use gasoline or other flammable, combustible, or corrosive vapors and liquids in the vicinity of this or any other appliance.

SAFETY INSTRUCTIONS

These instructions must be read prior to installation. If the information in these instructions is not followed exactly, a fire or explosion may result, causing property damage, personal injury, or death.

Hazards and Your Safety - Hot Water Can Scald!

Water temperature over **125°F** can cause severe burns instantly, or death from scalds. Children, disabled, and elderly are at highest risk of being scalded; see instruction manual before setting temperature at water heater! Feel water before bathing or showering. Temperature limiting valves are available, see manual.

If there is a smell of gas:

-Turn the gas cock off - Air the room - Do not try to light any appliances - Do not use any phone in your building - Do not touch any electrical switch - Extinguish any flames - Call immediately a licensed authorized technician or your local gas company - Follow the gas supplier's instructions - If you cannot reach your gas supplier, call the fire department.

If there is a smell of combustion products:

-Turn the unit off - Air the room - Call a licensed authorized technician.

Installation, alterations

Licensed authorized personnel must carry out the installation, calibration or alteration of the gas apparatus. Flue gas ducts must **not** be modified in any way. Any replaced part or packaging parts should never be left within reach of children.

3

Explosive products or easily inflammable products

Do not keep, use or store explosive materials or easily inflammable materials such as Gasoline, Adhesives, Solvents, Paint Thinner, Butane, Liquefied Propane, paper, etc., near the heater.

Maintenance

The user, according to the heater's operating instructions, has to keep the installation in good condition and guarantee the reliable, safe operation of the heater. At least once a year the user must call in a licensed authorized technician for routine maintenance, before using it for central heating.

Servicing Manual

When the installation and commissioning of the system has been completed, the installer should instruct the homeowner to save the installation manual near the heater so that service technicians may refer to it in the future.

Caution: Label all wires prior to disconnection when servicing controls. Wiring errors can cause improper and dangerous operation. **VERIFY PROPER OPERATION AFTER SERVICING.**

Do not use this appliance if any part has been under water. Immediately call a qualified service technician to inspect the appliance and to replace any part of the control system and any gas control, which has been under water.

GENERAL INFORMATION

This instruction manual refers to two types of heaters, the BMS and the BTS.

BMS - this appliance is a wall mounted, direct vent space/water heater

BTS - this appliance is a self standing floor model, direct vent space/water heater

Each type of heater can be of two different input power rating; a 10/20 or 15/29;

10/20 has an input power rating of 87,000 Btu/hr (26 kW)

15/29 has an input power rating of 107,000 Btu/hr (31.6 kW)

BMS 10/20
or
BMS 15/29
or
BTS 10/20
or
BTS 15/29

When referring to this instruction manual, be sure of which type of heater you are working with. This can be verified by referring to the data plate marked "Space water heater model". This data plate is located on the bottom side of the BMS, or on the inside of the front door (internal side) of the BTS.

Also verify the type of gas for which the heater is set. A label in the front of your heater states "NATURAL GAS", for heaters set to natural gas, or "LP GAS" for heaters set to LP gas.

TABLE OF CONTENTS

GENERAL INFORMATION	4
TABLE OF CONTENTS	5
GENERAL LAYOUT of the main components of model BMS	7
GENERAL LAYOUT of the main components of model BTS	9
A INSTALLATION INSTRUCTIONS	11
1 Operating and adjusting the output to the radiation system	11
2 Location	11
3 Installation	11
3.1 Installation template	12
3.1.1 Clearances for installation	12
3.2 Safety Relief Valve	13
3.3 Heating supply and Return	13
3.3.1 Installation of two heaters	13
3.3.2 Installation of three or more heaters	13
3.3.3 Radiant heating installation	13
3.3.4 Used of glycol	13
3.4 Domestic Hot and Cold water	14
3.5 Water Hardness	14
3.6 Gas Supply	14
3.6 Gas Supply (cont.)	15
3.7 Room Thermostat Connection	15
3.8 Electrical Supply Connection	15
4 VENTING SYSTEMS	17
4.1 Concentric Flue (Coaxial)	17
4.2 Split Flue	19
4.3 Chimney Venting	19
4.4 Venting Locations - Outside Walls (Direct Venting)	19
4.5 Kit for air intake/flue discharge	19
4.7 Water Connections for Model BMS	32
4.8 Water Connections for Model BTS	33
5 REGULATING THE DOMESTIC HOT WATER	40
6 BURNER	40
6.1 Changing the Gas Type	40
6.2 Adjusting Gas Flow and Pressure to the Burner	40
7 WIRING DIAGRAMS	41
B OPERATING AND MAINTENANCE INSTRUCTIONS for BMS	44
9 BMS model; INSTRUCTION FOR USE	44
9.1 Start-Up Instructions	44
9.2 Checks Prior to Ignition	44
9.3 Ignition Procedure	44
9.4 Summer-Winter Mode	45
9.5 Adjusting Central Heating	45
9.6 Manual Reset High-Limit Thermostat	45
9.7 Resetting the Ignition Module	45
9.8 Heating Circulator Pump	45
9.9 Low water cut-off device	45

TABLE OF CONTENTS

9.10 Shut-Down Procedure	45
9.11 Maintenance	45
9.12 Draining water from the heater	45
C OPERATING AND MAINTENANCE INSTRUCTIONS for BTS	46
10 - BTS model - INSTRUCTIONS FOR USE	46
10.1 Start-Up Instructions	46
10.2 Checks Prior to Ignition	46
10.3 Ignition Procedure	46
10.4 Summer-Winter Mode	47
10.5 Adjusting Central Heating	47
10.6 Manual Reset High-Limit Thermostat	47
10.7 Resetting the Ignition Module	47
10.8 Heating Circulator Pump	47
10.9 Low water cut-off device	47
10.10 Shut-Down Procedure	47
10.11 Maintenance	47
10.12 Draining water from the heater	47
D TROUBLESHOOTING	48
11 Troubleshooting Sequence of Operation to Light the Burner	48
12 Troubleshooting Sequence of Operation for a Call for Heat	49
E IMPORTANT INFORMATION FOR THE CUSTOMER	51
F SPARE PARTS	52
G TECHNICAL FEATURES	53
NOTES	55

GENERAL LAYOUT of the main components of model BMS

A = Flue discharge
B = Air intake


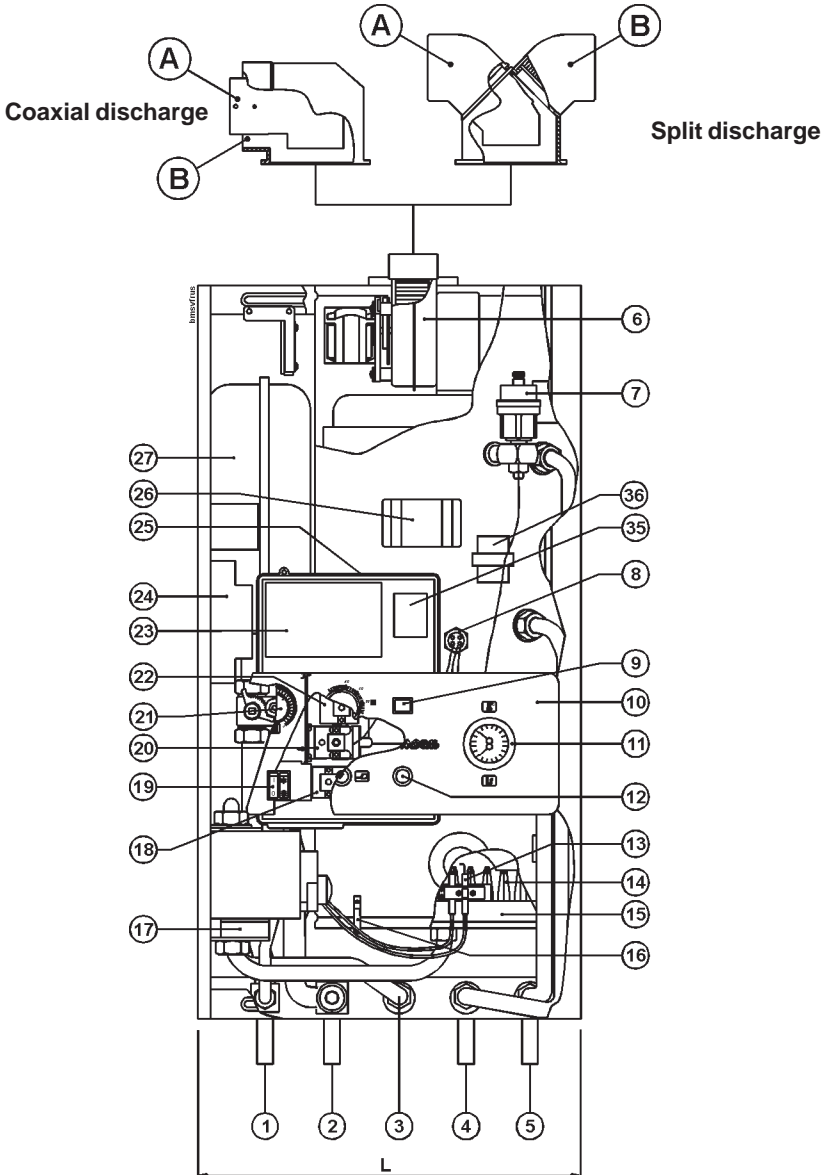


Figure 1 - BMS Front view

GENERAL LAYOUT of the main components of model BMS

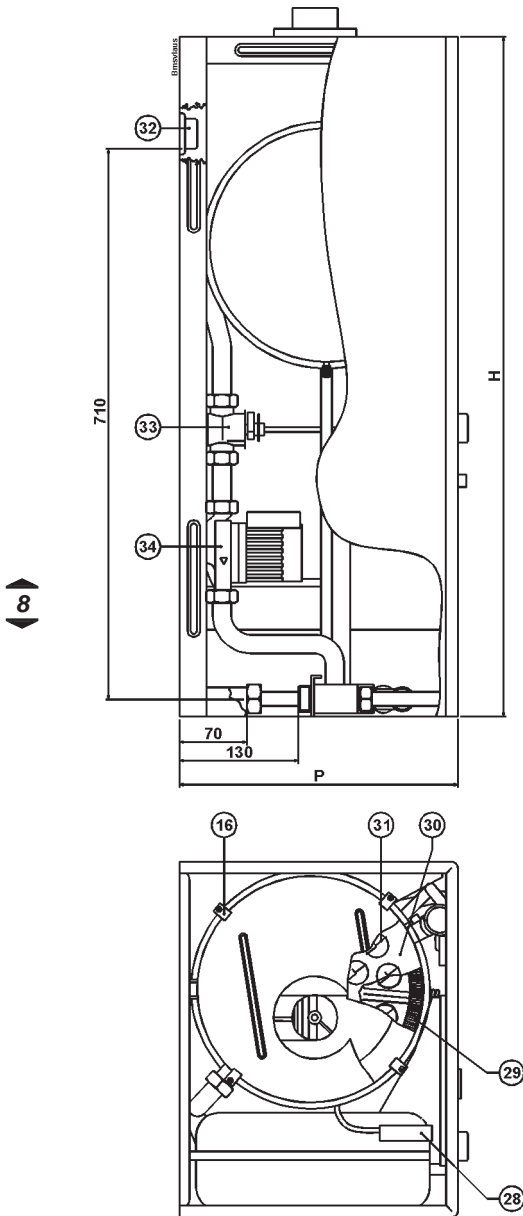

- 1 Central heating supply
- 2 Central heating return
- 3 Gas inlet
- 4 Domestic hot water outlet
- 5 Cold water inlet
- 6 Flue gas discharge fan
- 7 Automatic air vent
- 8 Thermostat bulb pocket
- 9 Gas valve service switch
- 10 Instrument panel
- 11 Temperature-pressure gauge
- 12 Failure lamp indicator
- 13 Ignition and detection electrodes
- 14 Burner
- 15 Gas manifold
- 16 Exchanger shell clamps
- 17 Gas valve
- 18 High limit thermostat
- 19 Power and circulator pump switches
- 20 Domestic hot water priority thermostat
- 21 Central heating regulation knob
- 22 Heater temperature control
- 23 Electrical control board
- 24 Ignition module
- 25 Electrical plastic cover
- 26 Electrical junction box
- 27 Expansion tank
- 28 Pressure switch
- 29 Domestic water heat exchanger
- 30 Heat exchanger
- 31 Turbulator
- 32 Support bracket
- 33 Central heating regulation valve
- 34 Circulator pump
- 35 Transformer
- 36 Low water cut-off

Figure 2 - BMS Side and top views

GENERAL LAYOUT of the main components of model BTS


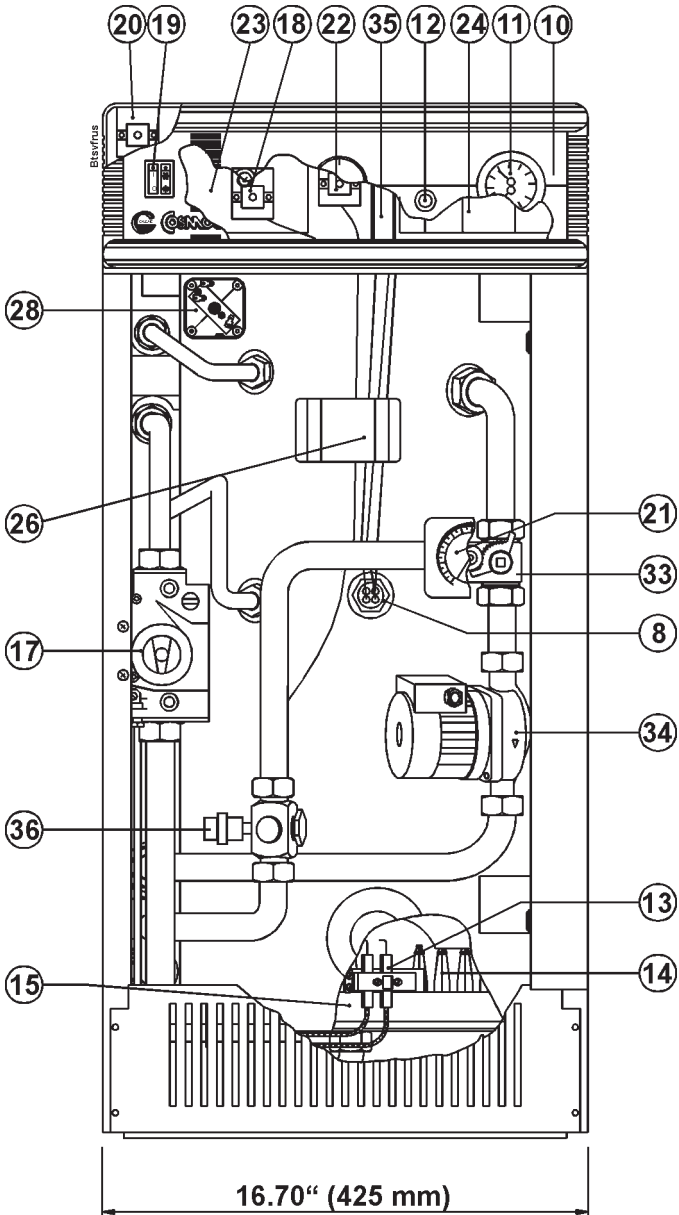


Figure 3 - BTS Front view

GENERAL LAYOUT of the main components of model BTS

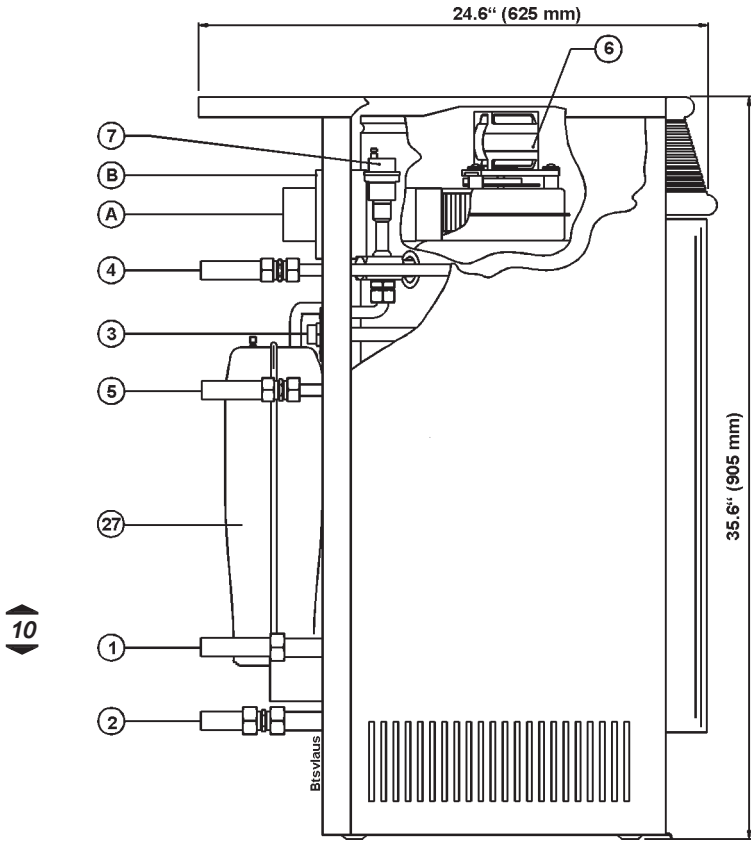

- | | |
|---------------------------------------|---|
| 1 Central heating supply | 20 Domestic hot water priority thermostat |
| 2 Central heating return | 21 Central heating regulation knob |
| 3 Gas inlet | 22 Heater temperature control |
| 4 Domestic hot water outlet | 23 Electrical control board |
| 5 Cold water inlet | 24 Ignition module |
| 6 Flue gas discharge fan | 25 - - |
| 7 Automatic air vent | 26 Electrical junction box |
| 8 Thermostat bulb pocket | 27 Expansion tank |
| 9 - - | 28 Pressure switch |
| 10 Instrument panel | 29 - - |
| 11 Temperature-pressure gauge | 30 - - |
| 12 Failure lamp indicator | 31 - - |
| 13 Ignition and detection electrodes | 32 - - |
| 14 Burner | 33 Central heating regulation valve |
| 15 Gas manifold | 34 Circulator pump |
| 16 - - | 35 Transformer |
| 17 Gas valve | 36 Low water cut-off |
| 18 High limit thermostat | A Flue discharge |
| 19 Power and circulator pump switches | B Air intake |

Figure 4 - BTS side view

A INSTALLATION INSTRUCTIONS

1 Operating and adjusting the output to the radiation system

The **COSMOGAS** heater can be installed in any domestic or light commercial building where the maximum BTU/H required is not greater than 88,800 BTU/H.

The unit has a internal mixing valve (heating side only) that can be adjusted to regulate the supply water temperature delivered to the heating system.

The heating system will not receive any water unless the water temperature inside of the heater is at a minimum of **140°F**. The heater built-in domestic hot water priority thermostat will cease the power to the circulator until the temperature is greater than **140°F**.

2 Location

This space/water heater unit is not intended for outdoor installation. Choose a location centralized to the piping system along with consideration to the vent pipe length. Additionally, you will need to place the space/water heater so that the controls, drain, inlet/outlet, and gas valve are easily accessed. Also, care must be exercised when choosing the location of this appliance, where leakage from the safety relief valves, leakage from related piping, or connections, will not result in damage to the surrounding areas, or to the lower floor of the building.

No valve is to be placed between the safety relief valves and the heater. The discharge from the temperature and pressure relief valve must be conducted to a suitable place for disposal. No reducing coupling or other restriction shall be installed in the discharge line. The discharge line should allow complete drainage of both valve and line.

3 Installation

The installation must conform to local codes and ordinances or, in the absence of local codes, the **National Fuel Gas Code ANSI Z 223.1/NFPA 54 - 1984**. When installed the appliance must be electrically grounded in accordance with the **National Electrical Code, ANSI/NFPA No.70 - 1987**.

For Canada, the installation should conform to **CGA B149.1 INSTALLATION CODES** and/or local installation codes.

The gas supply piping system should be tested before the heater is connected.

The heater, (complete with all its parts: external jacket, intake and discharge flue pipes, etc.), must be installed leaving a distance of at least **10 cm**,

(4"), from sidewalls and ceiling.

Installation of the **BTS** combi directly on combustible flooring such as carpeting shall be installed on a metal or wood panel extending behind the full width and depth of the appliance by at least **3"**, (**76.2 mm**), in any direction or, if the appliance is installed in an alcove or closet, the entire floor shall be covered by the panel.

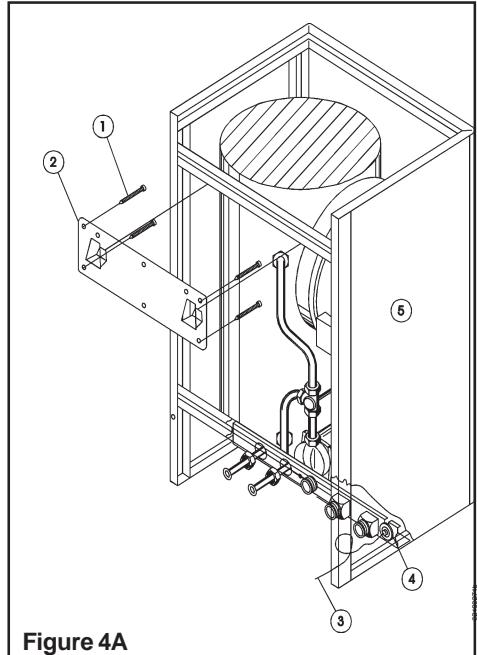


Figure 4A

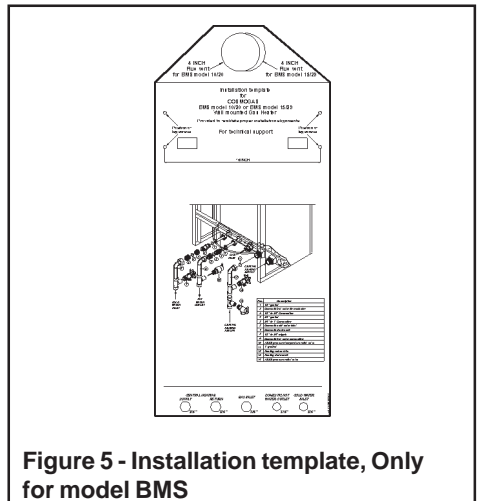


Figure 5 - Installation template, Only for model BMS

A INSTALLATION INSTRUCTIONS

3.1 Installation template

ONLY model BMS is provided with an installation template to facilitate proper installation alignments (See figure 5 below).

3.1.1 Clearances for installation

The figures 5A and 5B show the proper distances to keep from any obstacle pertaining to the support bracket (2) or to the wall.

The procedure for installing the BMS is as follow:

1) - Take the support bracket (2) and choose a position with proper clearances, as per Figures 5A & 5B. A minimum clearance of 40" (1000mm) is required from the front of the heater.

WARNING: Please take caution when choosing a mounting surface for the heater. The weight of the heater with water is approximately 165 lbs. Make certain that the wall can support such weight.

2) Screw the bracket to the wall. The screws **MUST** be screwed in correspondence of the 16" vertical studs (see figures 4A and 5A)

3) Place the template onto the support bracket and make all rough-in holes for the piping to the heater. The hole for the coaxial flue vent kit discharge may also be cut at this time.

4) Install the heater on the support bracket and secure all of the connections.

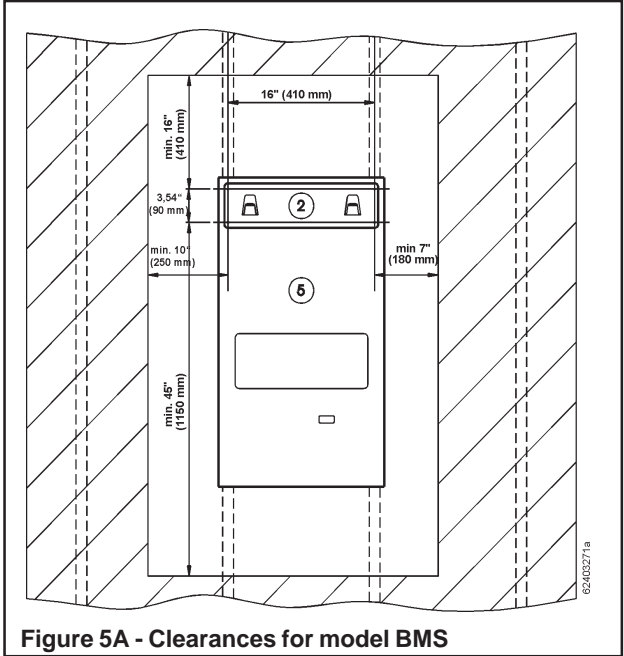


Figure 5A - Clearances for model BMS

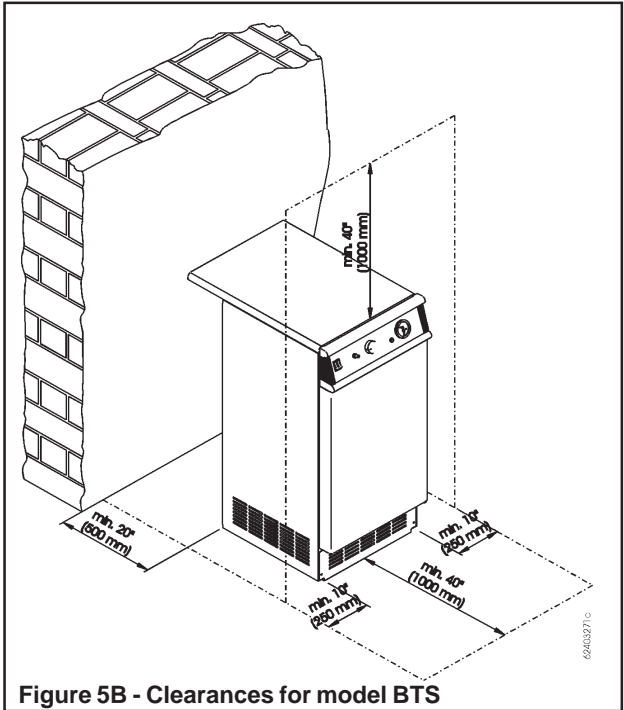


Figure 5B - Clearances for model BTS

A INSTALLATION INSTRUCTIONS

3.2 Safety Relief Valve

An **ASME** approved safety relief valve, (set at **30 psi**), must be installed in a vertical position on the outlet side of the central heating system, and as close as possible to the heater. There must be no valves between the safety relief valve and the heater. Manually operate the safety relief valve at least once a year to ensure proper operation. Precaution must be taken prior to operating the safety relief valve, to avoid contact with hot water coming out of the safety relief valve and to prevent water damage. If the safety relief valve discharges periodically, this may be due to thermal expansion in a closed water supply system. Contact the water supplier or local plumbing inspector on how to correct this situation. Do not plug the safety relief valve.

3.3 Heating supply and Return

The central heating supply and return pipes are marked with different colored caps, (supply red and return blue).

If there are any heating elements above heater level, it is advisable to install a check valve on the supply pipe to prevent “natural circulation” phenomena from occurring.

If the heater is to be connected to an existing system it is advisable to wash out and remove any deposits from inside the existing pipes, and install a filter at the lowest point to trap any additional impurities when it is running.

This equipment is designed for use in a closed loop system.

Installation schematics are found in figures 23 to 28.

WARNING !!! All the schematics in figures 23 to 28 are only samples!. Safety apparatus, pipe diameters, and auxiliary accessories, must be verified by a qualified personnel only and in accordance with the national and/or local codes.

3.3.1 Installation of two heaters

Installing two heaters in parallel. Follow the schema in the figure 23

3.3.2 Installation of three or more heaters

Installing three or more heaters in parallel. Follow the schema in the figure 24

3.3.3 Radiant heating installation

When the heater is used in conjunction with radiant heating, it is imperative that the tubing contains an oxygen diffusion barrier. If you are unsure whether or not the tubing has a barrier, a heat exchanger must be used to protect the heater from oxygen corrosion (See figure 25). This situation will also occur if the heater is used on an open-loop system where new, cold-fill water is introduced into the system. The oxygen will remove itself from solution and react chemically with the ferrous components (i.e. steel), causing them to rust and corrode. **THIS TYPE OF FAILURE IS NOT COVERED BY THE WARRANTY!**

3.3.4 Used of glycol

If glycol is used with the heater, the glycol must be recognized as safe or approved by the United States Food and Drug Administration for food contact as listed in Code of Federal Regulations, title 21, part 182 of the Food Additive Regulations. Any additives introduced into the heating system **must** be recognized as safe by the United States Food and Drug Administration. **If a non-approved additive is used, it can cause serious health problems or possibly death.**The pressure of the heating system side of the heater must be fitted with devices (automatic water feed/pressure reducing valve not to exceed 30 psi) arranged to function automatically in order to maintain the pressure of the heating side at a level below that of the potable water leaving the heat exchanger.

A INSTALLATION INSTRUCTIONS

3.4 Domestic Hot and Cold water

The domestic hot water flow restrictor must be installed on the cold water inlet, (Refer to figure 25, 26, 27 and 28).

For servicing purposes, install a shut-off valve upstream from the cold water inlet.

The heater's thermostat can be regulated to provide domestic hot water between **100°F** and **180°F**. Water temperature over **125°F** can cause severe burns instantly. Since it is required that the heater water temperature reach above **140°F** in order for the heating system side of the unit to operate, **it is imperative that a mixing valve be installed external of the heater to further regulate the temperature of the domestic hot water (See figures 23, 25, 26, 27 and 28). Failure to install a domestic side mixing valve will result in severe burns!**

Piping and components connected to the water heater for space heating shall be suitable for use with potable water, and shall not be connected to any heating system or components previously used with a non-potable water heating appliance.

The domestic hot water circuit needs an **ASME** approved pressure relief valve, set at **150 psi**, installed as close as possible to the heater. **There must be no valves between the relief valve and the heater. The relief valve discharge pipe must not be restricted or plugged.**

3.5 Water Hardness

In hard water areas (above **150 p.p.m**), it is recommended that a suitable water treatment device (softener with filters) be installed. Excessive buildup of minerals in the heat exchanger can cause a non-warranty failure. Water hardness can be determined by using the standard test or by checking with your local water authority.

Toxic chemicals, such as used for heater treatment, should not be introduced into the potable water used for space heating.

3.6 Gas Supply

Before making any gas connections, verify that the heater is being supplied with same gas type as indicated on the rating plate. The rating plate is located on the front of the BMS, and is located on the front door of the BTS. This heater has orifices which will operate at an altitude of up to **2,000** feet. For installations in higher elevations, down-rate the heater by **10%**.

Install a manual gas cock outside of the heater. Refer to Figures 1 and 3, item 3, for the gas inlet location of the heater.

Gas piping to the heater must be sufficient to guarantee a supply of gas to meet maximum requirements. See Table 1 for max. and min. values of gas pressure (Back of manual).

All piping must comply with local codes and ordinances or with the National Fuel Gas Code, (ANSI Z223.1 NFPA No. 54), whichever applies.

The appliance and its individual shutoff valve must be disconnected from the gas supply piping system during any pressure testing of that system at test pressures in excess of ½ psig, (3.5 kPa).

The appliance must be isolated from the gas supply piping system by closing its individual manual shutoff valve during any pressure testing of the gas supply piping system at test pressures equal to or less than ½ psig, (3.5 kPa).


A INSTALLATION INSTRUCTIONS

3.6 Gas Supply (cont.)

Length of Gas Pipe	Capacity of Gas Pipe Size in MBTUH			
	1/2"	3/4"	1"	1 1/4"
10'	132	278	520	1050
20'	92	190	350	730
30'	73	152	285	590
40'	63	130	245	500
50'		115	215	440
75'		93	175	360
100'		79	150	305
150'		64	120	250
Additional length to be added for each bend or tee	1.3'	1.7'	2.2'	2.7'

3.7 Room Thermostat Connection

This is installed by removing the electrical junction box cover indicated in fig. 6, (see fig. 1 and 3, item 26), and connecting the two wires of the room thermostat, or zone valve control thermostat, to the low voltage terminals, (figure 6, item B). **NOTE: first remove factory installed jumper from terminals.** The room thermostat must always be located in a point of the house where the temperature is not subject to sudden changes.

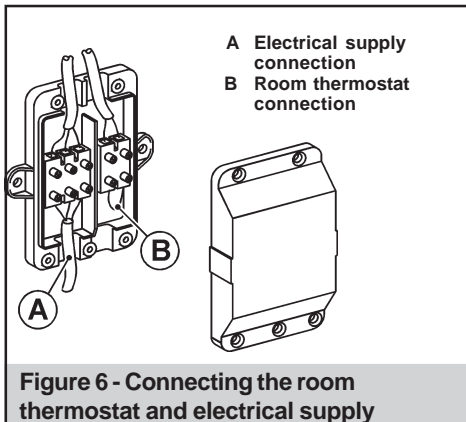

3.8 Electrical Supply Connection



The heater must be connected to a **115V 60Hz, single phase electrical supply** fused to **15 amps**,

Grounding is required as well as the installation of a main emergency switch immediately upstream from the heater.

An electrical junction box (see figures 1 and 3, item 26) is provided for connections for both the line voltage of 115V 60 Hz (See figure 6 item A), and the room thermostat at low voltage of 24Vac (See figure 6 item B).

The cable wire of the line voltage must be inserted into the heater, through the pass-cable positioned in the side of the idraulic connections (see figure 6A and 6B).

A INSTALLATION INSTRUCTIONS

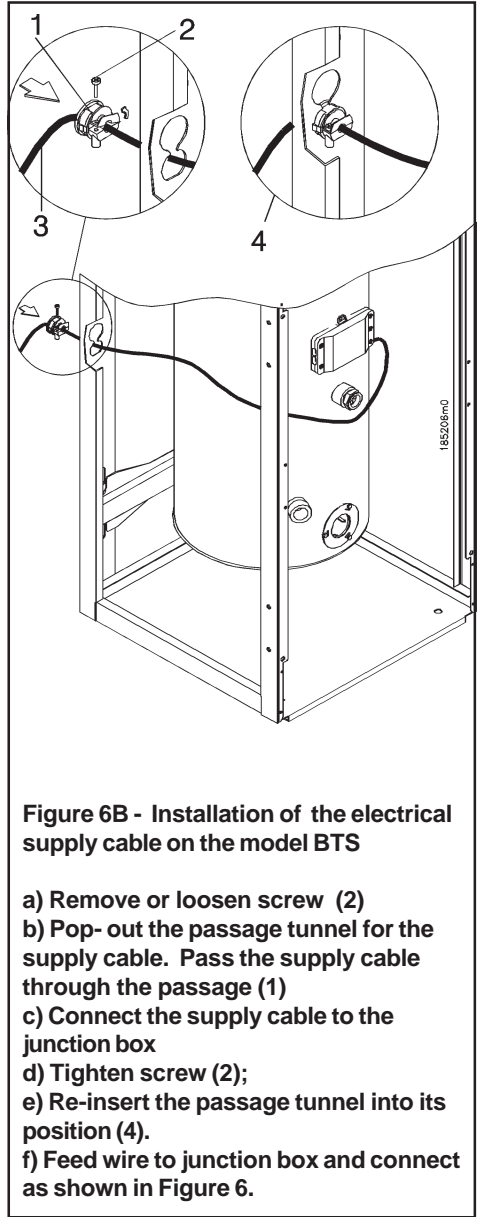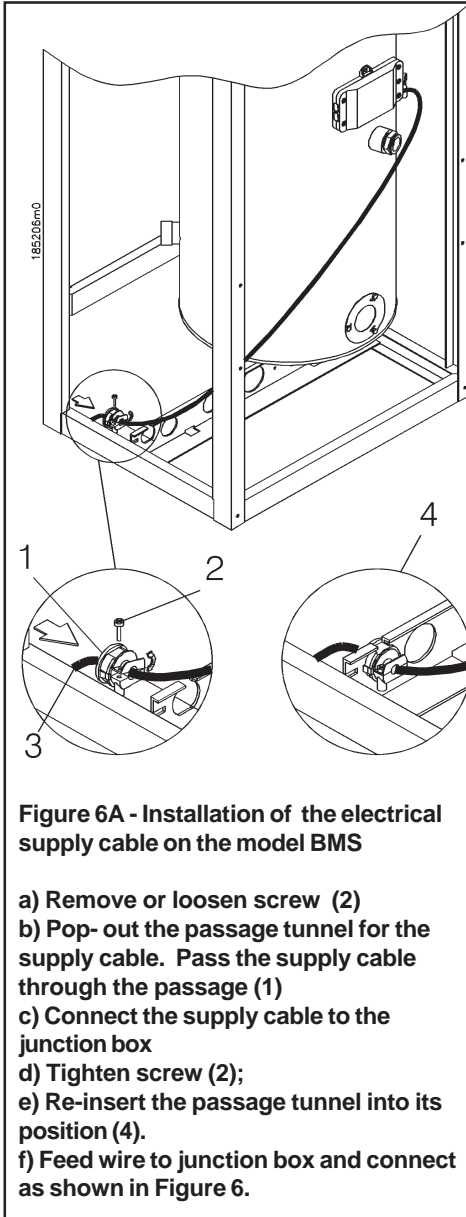

A INSTALLATION INSTRUCTIONS

4 VENTING SYSTEMS

This heater can be fitted with either a concentric or split type venting system. Particular attention must be taken when installing the vent pipes that go through the wall to the outside. It must always be possible to carry out routine maintenance operations of the flue. The vent pipe must be installed in such a way that it can be removed, if needed, in the future. Hence, a suitable sheath should be prepared in which to insert the vent pipe. Both venting systems are suitable for venting through a wall 1" to 24" thick.

The connection of the vent air intake system to the heater can turn 360°, which means in all directions, making installation extremely easy.

To turn it just loosen the securing screws on the base of the vent elbow where it attaches to the heater, turn to desired position, then tighten the screws without forcing them.

You must place the terminal in an open area, and follow the following guidelines:

- Make certain that exhaust gas does not re-circulate back into the intake pipe.
- Never vent into a walkway or patio area, or an alley, or otherwise public area less than 7ft from the ground level. This is to prevent anyone from walking into the vent;
- Never vent over or under a window or over a doorway;
- Never install a heat saver or similar product to capture waste heat from exhaust;
- Always have vent 1ft above ground level, away from shrubs and bushes.
- Follow local gas codes in your region or refer to **National Fuel Gas Code, or Can B149.1 INSTALLATION CODES.**
- Always have vent at least 3ft from an inside corner of outside walls.
- Maintain at least 4ft clearance to electric, gas meters and exhaust fans.
- Always place screens in all openings in intake and exhaust to prevent foreign matter from entering the heater.
- The vent terminals, (concentric, split type exhaust), must be a minimum of 1ft above the ground level.
- If split type vent will be venting into a chimney, make certain that no other

appliances are vented into it. This power-vented heater must not share a chimney. Vent exhaust terminal should be inserted into, but not beyond, inner wall of chimney. Do not vent into transient pipe. Warranty will be void.

CAUTION! - Take all precautionary measures to allow the angle of the flue to run down slightly to the outside, NEVER rising. Anticipate for all horizontal pipes, an inclination of **1/4" per foot** toward the discharge. If a vertical pipe follows a horizontal one, place a condensation discharge fitting in the lowest part of the vertical pipe. A condensation discharge pipefitting must also be used for vertical discharge pipe installations directly from the heater with a pipe whose length is more than 10".

During normal operating conditions, the heater will have exhaust gases exiting from the flue pipe. The smoke will be heavier on some days than on others. This is due to the outdoor weather conditions (the temperature, humidity, etc.), and is extremely common.

4.1 Concentric Flue (Coaxial)

The (Coaxial) concentric vent, (air inlet and flue outlet), system consists of 2 pipes: the outer one for fresh air intake, the inner pipe for flue exhaust discharge.

With optional pipe, it is possible to increase the overall length up to 15ft (4.5 m).

There are also 90° concentric elbows available, if they are installed, there will be a loss of draught equal to that caused by 3ft, (1 m), of straight pipe.

Connections between the various parts must be secured by using self-tapping screws, (see fig.9). The vents stainless steel end terminal must always come completely out of the outer pipe. If for any reason the intake grid is blocked, the heater will not receive enough air for combustion and the burner would fail to ignite.

A INSTALLATION INSTRUCTIONS

ATTENTION !!!

We want to remember that all accessories in the line of the air intake and in the line of flue discharge MUST be secured with screws between them, and MUST be sealed from flue or air leakage

PRECAUTION TO BE TAKEN WHEN INSTALLING COAXIAL VENTING

Proper assembly and installation of venting elbows and tubing must include the use of self-tapping screws to permanently secure in place the internal discharge tube. Self-tapping screws are used to insure that the discharge vent tube remains in place and not allow discharge gases to re-enter the heater. Failure to


secure the internal discharge tube may result in the heater backfiring and causing permanent damage to the heat exchanger. Heaters which have been damaged for this reason are not covered in our limited warranty.

The stainless steel (End terminal) wind guard must fit properly and inter-lock into slip joint of intake pipe.

It is imperative that the internal discharge pipe first be secured in place with self-tapping screws before attaching and securing the external vent pipe. Also, ensure that the two grids (P and O on the picture below) of the end terminal come completely out of the outer pipe. If the intake grid is hidden the heater will not receive enough air for combustion and would fail to ignite.

Picture # x: First, insert the vent inner pipe into the vent elbow and tighten using self-tapping screws
Picture # y: Second, fit the outer pipe and secure it with proper screws
See drawings below.

- K = Screws provided
- L = Inner pipe
- M = Screws provided
- N = This position shall be respected
- O = Discharge grid
- P = Intake grid

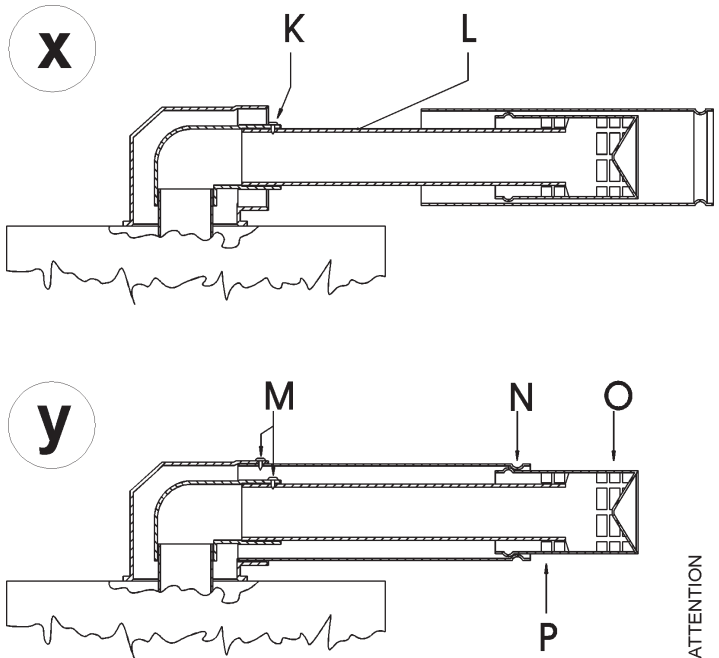

ATTENTION

A INSTALLATION INSTRUCTIONS

4.2 Split Flue

The split flue vent system (two separate pipes) can be extended (on the discharge side only) up to a total length of 20 ft (6 m). Changes in direction can be obtained by using **90°** and **45°** elbows. If they are installed, there will be a loss of draught equal to **3ft** (1 m) and **1 1/2ft** (0.5 m) of straight pipe, respectively. This is valid only for pipes and elbows manufactured by Cosmogas s.r.l..

If the heater is installed in a large open area such as a full basement or alcove, the combustion air could also be supplied without the intake pipe, (For model BMS see figures **8, 11, 12, 13** and **14** or for model BTS see figures **16, 18, 19** and **20** for model BTS). **NOTE:** The heater will draw all air for combustion through the top of the unit from the space around the heater. Ventilation should be adequate to provide sufficient air to properly support combustion. Air for combustion and room ventilation must be obtained from spaces freely communicating with the outdoors. Air openings to the room should not be obstructed.

For heaters in confined rooms, two permanent openings must be provided - one within 12" of the ceiling and one within 12" of the floor. Each opening must be at least one square inch per 1,000 BTU/H heater input, but not less than 100 square inches. These openings must freely connect with areas having adequate infiltration to the outside.

When all air provided is supplied from the outdoors, the openings, as described above, shall be of the size listed below for each particular arrangement:

- All ducting shall be the same size as the opening which it is to be connected.
- One square inch of free area per 4,000 BTU/H of heater input for direct outdoor air supply through an outside wall or vertical duct directly outside.
- One square inch of free area for every 2,000 BTU/H of heater input for direct outdoor air through horizontal ducting.

Caution!

The discharge pipe temperature is above 250°F while functioning, therefore it is essential that a thermal insulation protection sheath be used in the wall opening.

4.3 Chimney Venting

If split type vent will be venting into a chimney, make certain that no other appliances are vented into it. This power-vented heater must not share a chimney. Vent exhaust terminal should be inserted into, but not beyond, inner wall of chimney.

Do not vent into transient pipe. Warranty will be void.

4.4 Venting Locations - Outside Walls (Direct Venting)

The center line of the vent opening must be at least 16 1/2" above grade, outside, and at least 12" from any other building openings (doors, windows, etc.).

Make sure that vent pipe is pitched down from the unit toward the outside wall 1/4" per foot. This will prevent any water from running back into the heater.


Do not locate the vent terminal where flue products could strike against building materials and cause corrosion.

4.5 Kit for air intake/flue discharge


For comfort for the installer, COSMOGAS has created some flue kit, complete of all the necessary components for flue discharge and air intake. The four kits available are as follows:

A INSTALLATION INSTRUCTIONS


P/N 62617168. Split vent kit. This kit is for take the air from the room where the heater is installed, and discharge the flue outside from the building. The pipe of discharge is length 2.5ft.. If you need extensions or elbows or other accessories, refer to figures R, S and T. This kit can be used for heaters model BMS and BTS.

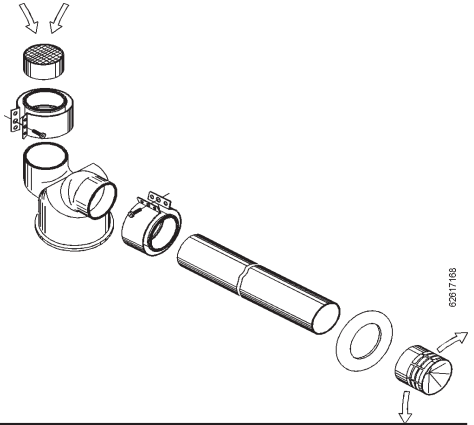


P/N 62617174. Coaxial Vent & Elbow Kit. This kit is for taking and discharging air from/to the outside of the building. The pipe of discharge length is 3ft. If you need extensions, elbows or other accessories, refer to figures O, P and Q. This kit can be used for heaters model BM and BTS. To discharge the flue in vertical position you must to use a roof vent terminal 62617070, (see figure P)

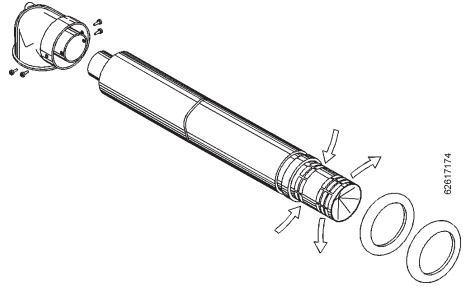

P/N 62617175. Coaxial Vent & Straight Adapter Kit. This kit is for taking and discharging air from/to the outside of the building. The pipe of discharge length is 3ft. If you need extensions, elbows or other accessories, refer to figures O, P and Q. This kit can be used for heaters model BM and BTS. To discharge the flue in vertical position you must to use a roof vent terminal 62617070, (see figure P)

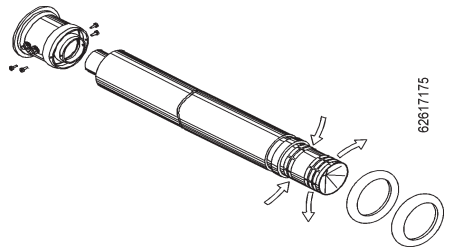

P/N 62630046. Vent Adaptor for 3" Discharge pipe. This kit is for to connect only the flue discharge to a commercial 3" pipe. This kit must be used together with a heater mounted adapter P/N 62617124 or 62617060. With this configuration, the installer is responsible for the materials used and for the installation. In any case follow the national or local codes..

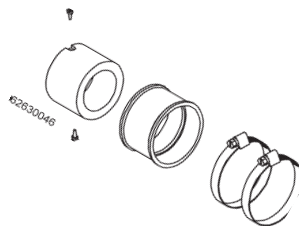


A INSTALLATION INSTRUCTIONS

Besides the kits COSMOGAS has a series of accessories, that in conjunction with the kits, give the installer the possibility of many configuration of flue discharge and/or air intake. See examples to the figures O, P, Q, R, S, T, U and V. Please remember that these configurations are only examples, and that many other possibilities exist.


Reference	P/N	Description
1	60702011	Washer for split
2	60702012	Washer for coaxial
3	61302011	Split system Roof terminal D. 80
4	62617010	Plug for flue test
5	62617049	3ft coaxial Extension
6	62617053	Split system Roof terminal D. 80
7	62617056	Split system In-Line Elbow FF 90°
8	62617058	Split system In-Line Elbow MF 90°
9	62617060	Coaxial elbow (Heater Mounted Only)
10	62617062	Split system "Viking"
11	62617063	Silicone Coupling + clamp
12	62617070	Coaxial Roof Terminal
13	62617077	In-Line Elbow 90° M/F (Coaxial)
14	62617086	3ft Extension for split system
15	62617087	Coaxial 3 ft vent, (End-Terminal only)
16	62617124	Straight coaxial Adapter (Heater mounted only)
17	62617159	In-Line Elbow 45° M/F (Coaxial)
18	62617168	Split vent kit
19	62617172	Coaxial 60/100 condensing trap
20	62617173	Split-vent D.80 condensing trap
21	62617174	Coaxial Vent & Elbow Kit
22	62617175	Coaxial Vent & Straight Adapter Kit
23	62630046	Vent Adaptor for 3" Discharge pipe
24	61302003	Intake grid D.80
25	61302004	Terminal vent D.80
26	62617059	In-Line elbow 45° M/F (for split)
A	not available	Flat for roof
B	not available	Condensate discharge
C	not available	Terminal vent for roof (3" diameter)
D	not available	Extension (3" diameter)
E	not available	Tee raccord (3" diameter)
F	not available	Condensate discharge with siphon (3" diameter)
G	not available	In-Line Elbow 90° (3" diameter)

In the following pictures, the P/N 62617062 is repeated 4 times to show all of the possibilities that has this accessory has. It can be rotated 360° under the heater, and its elbows can also be rotated 360° to direct air intake and flue discharge in all orientations.


A INSTALLATION INSTRUCTIONS

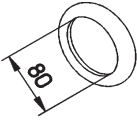


60702011

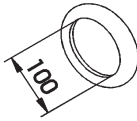


60702012

 


62617010

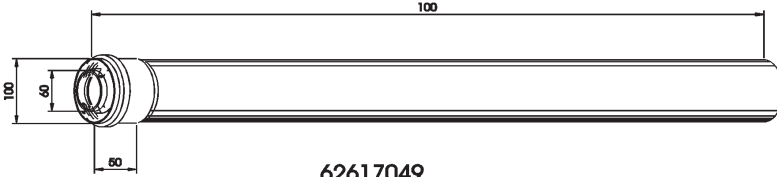


62617049

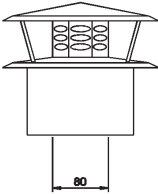


62617053

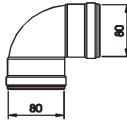


62617056

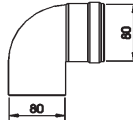


62617058

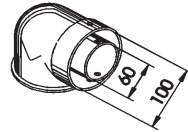


62617188

 


62617197

 


62617197

 


62617197

 


62617197

 


62617063

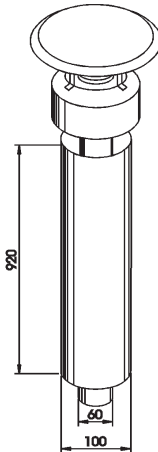

62617070

 


62617077

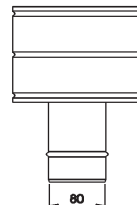


61302011


A INSTALLATION INSTRUCTIONS

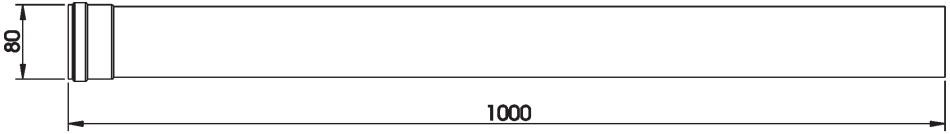


62617086

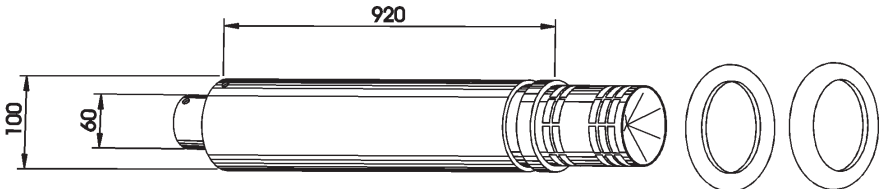


62617087

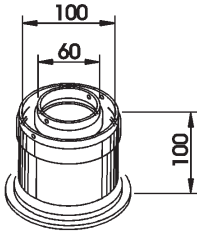


62617124

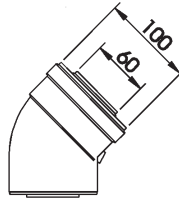


62617159

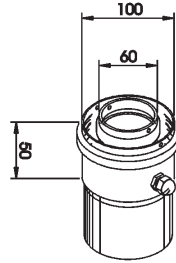


62617172

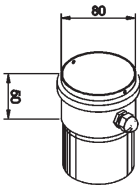


62617173

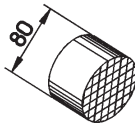

61302003

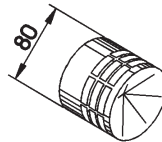

61302004

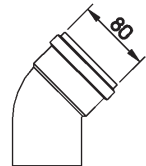


6267059

ACC_FUMI_USA2

A INSTALLATION INSTRUCTIONS

Some examples of vent make with the kits predisposed by COSMOGAS P/N 62617168, P/N 62617174 e P/N 62617175.


Figure L

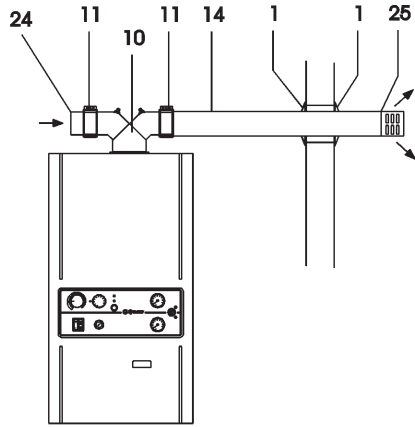

62617168


24

Figure M

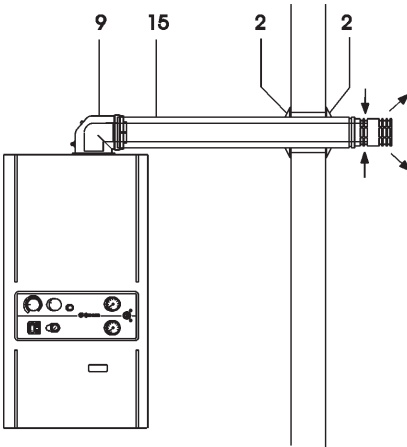

62617174

Figure N

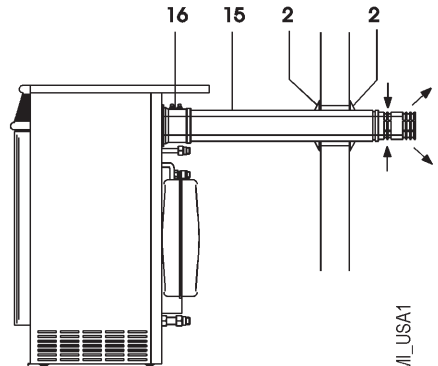

62617175

Figure R



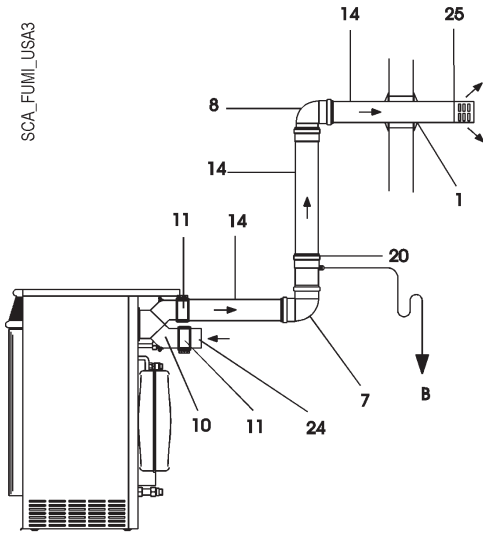


Figure S

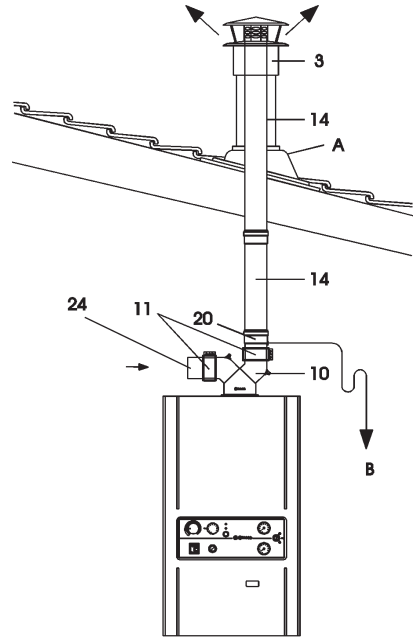

26

Figure T

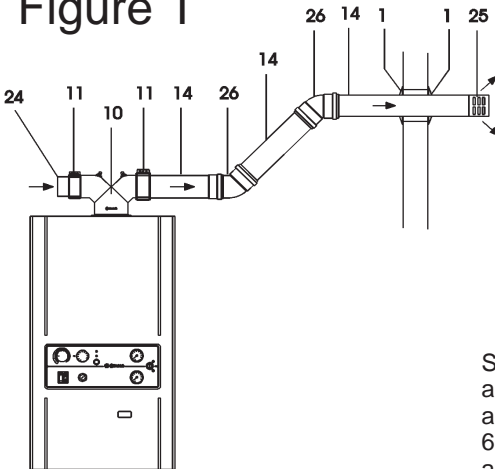

Some examples of vent make with some accessories for split and a kit for split. In all figures (R, S and T) we have used a kit 62617168 in combination with accessories for split system.

A INSTALLATION INSTRUCTIONS

Some examples of vent make with a 3" commercial pipe. In the figure U we have a BMS heater, with elbow raccord #9, and with a kit #23 for to connect your 3" pipe. In the figure V, we have a BTS heater with with an straight raccord #16 and with a kit #23 for to connect your 3" pipe.

Figure U






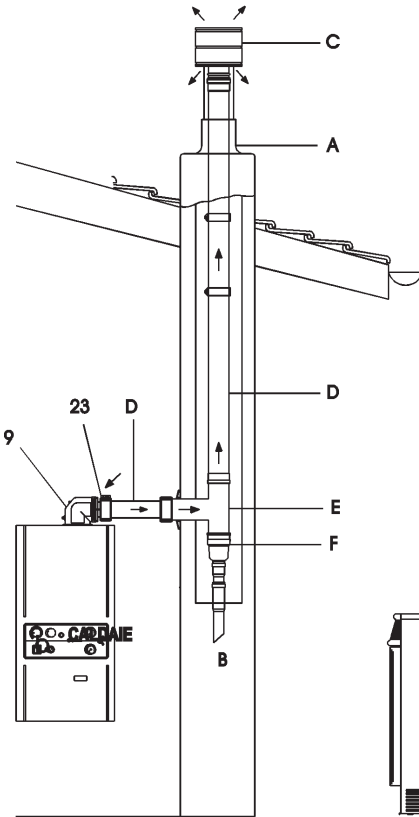


Figure V

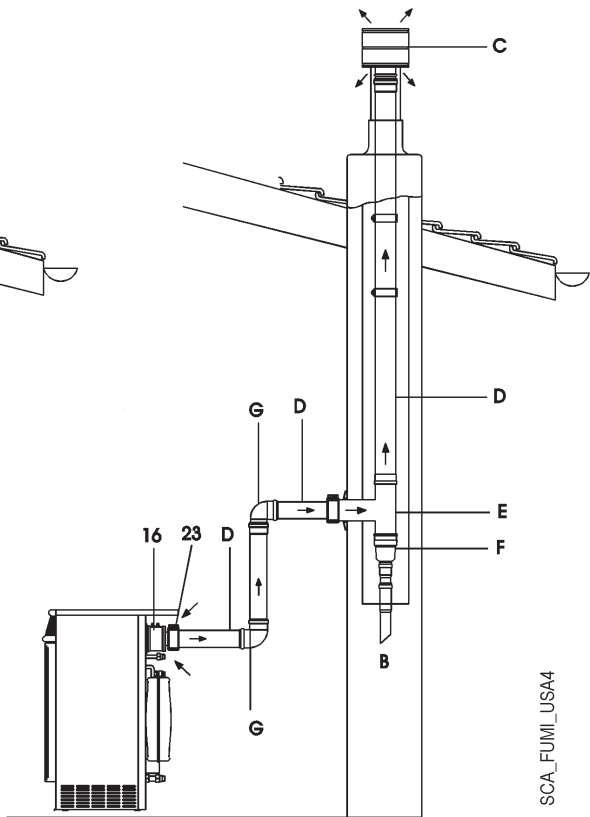
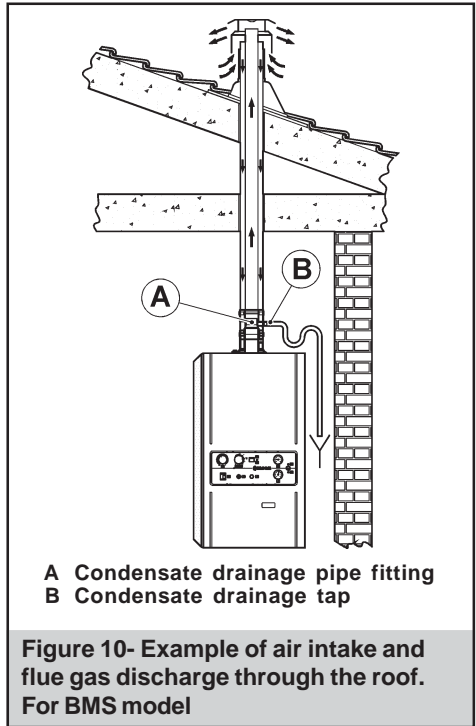
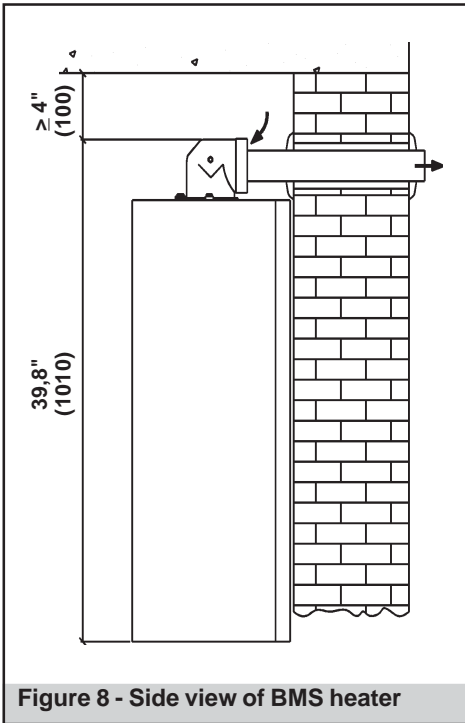
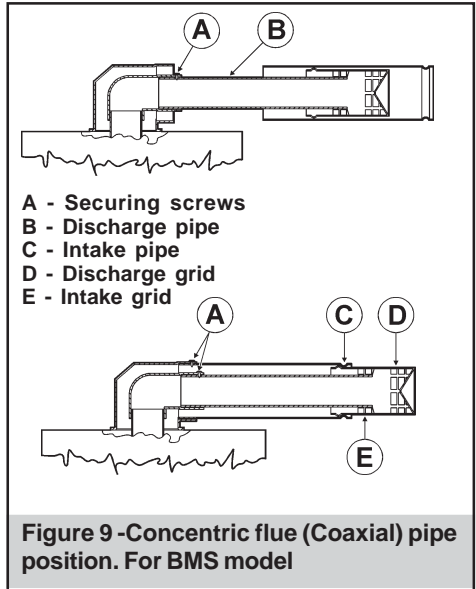


SCA_FUMI_USA4

A INSTALLATION INSTRUCTIONS

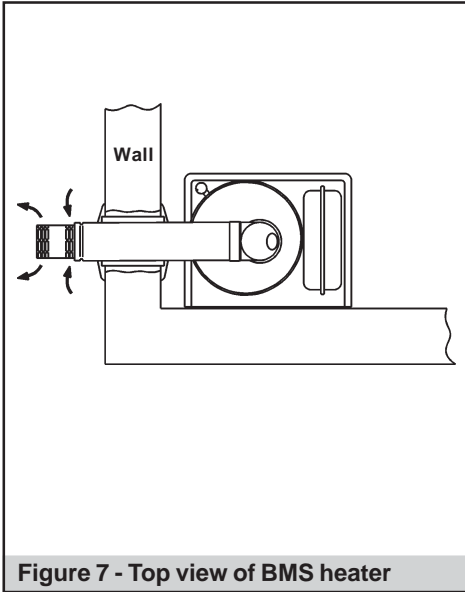

A INSTALLATION INSTRUCTIONS

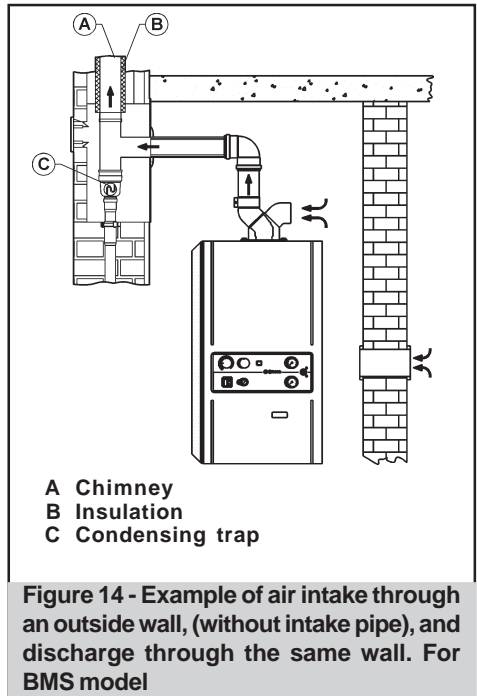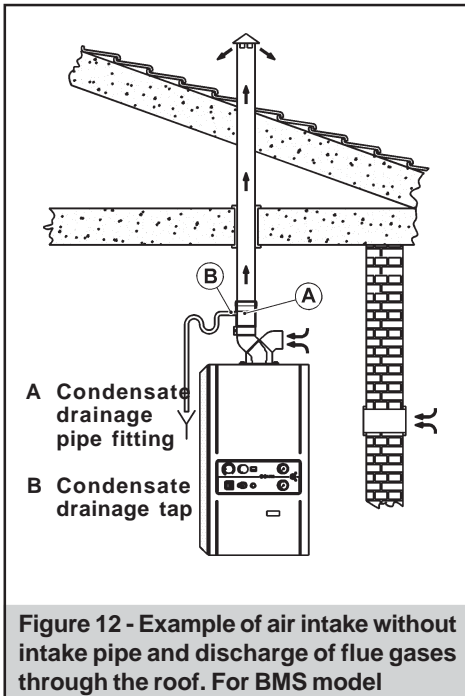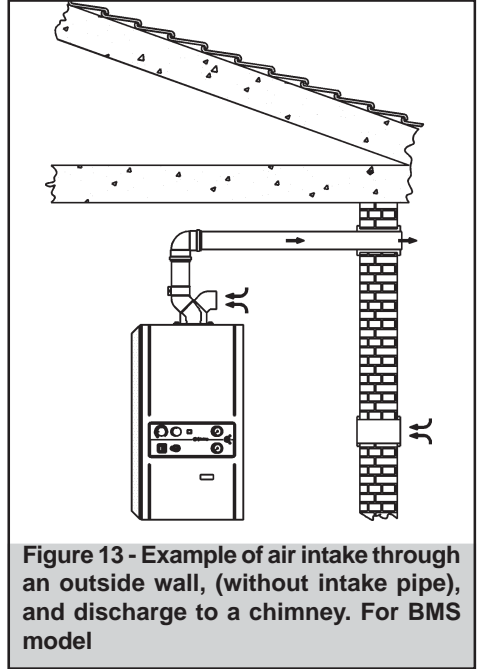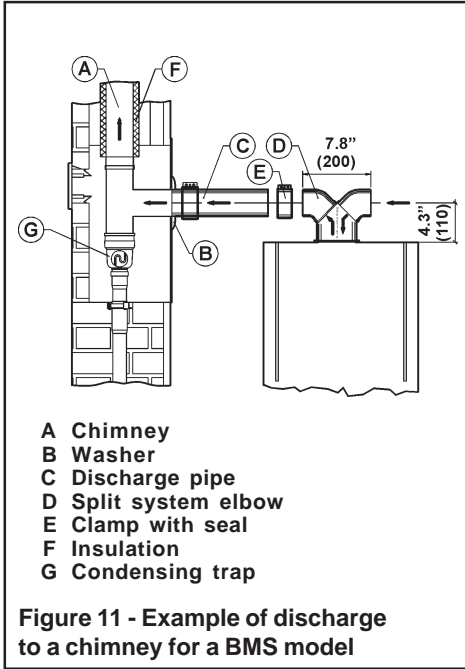

A INSTALLATION INSTRUCTIONS



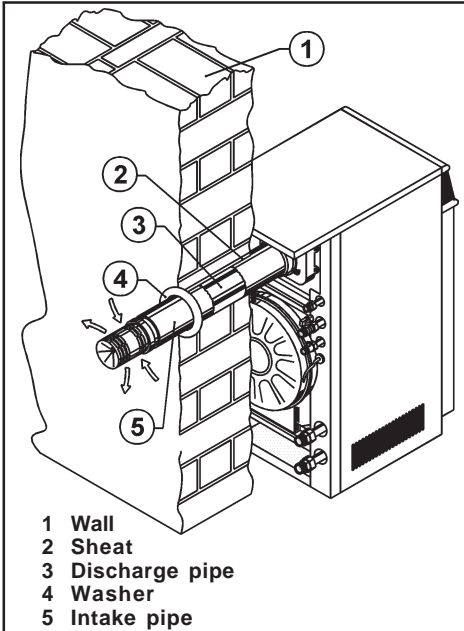


Figure 15 - Discharge with coaxial flue for BTS model

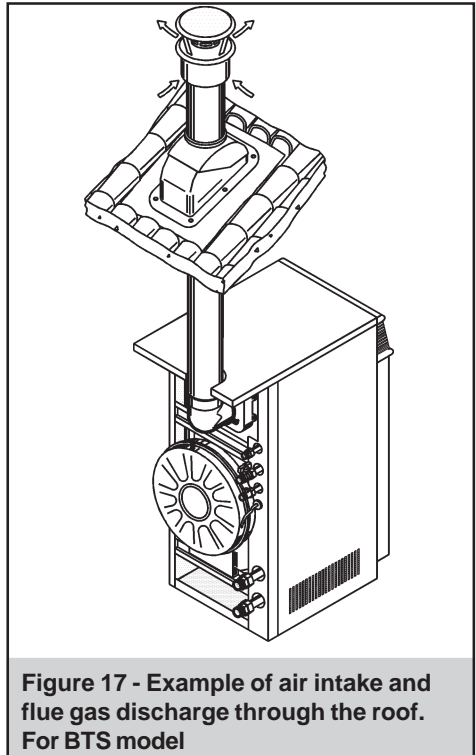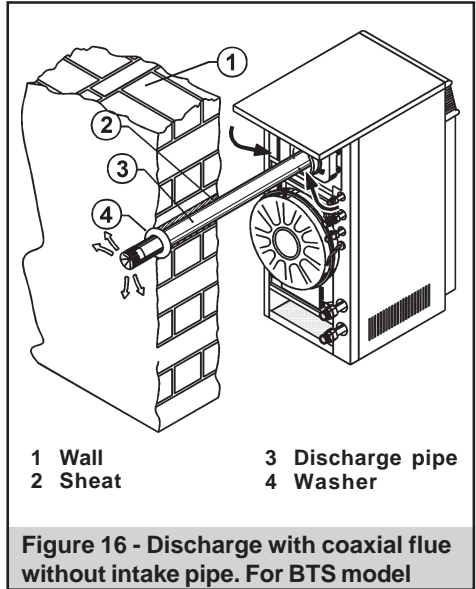

A INSTALLATION INSTRUCTIONS


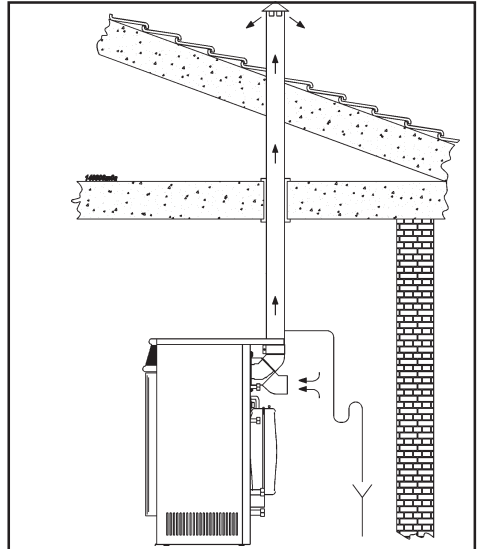


Figure 19 - Example of air intake without intake pipe and discharge of flue gases through the roof. For model BTS.

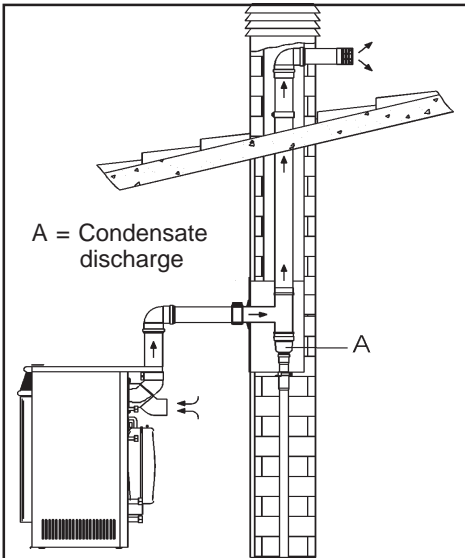

A = Condensate discharge

Figure 18 - Example of air intake through an outside wall, (without intake pipe), and discharge to a chimney. For model BTS.


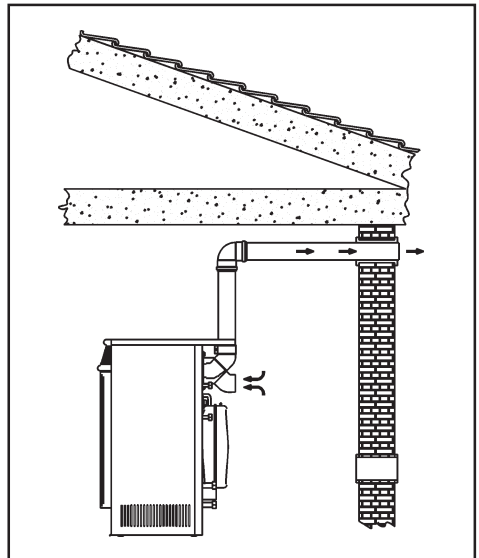


Figure 20 - Example of air intake through an outside wall, (without intake pipe), and discharge through the same wall. For model BTS.

A INSTALLATION INSTRUCTIONS


4.7 Water Connections for Model BMS

Each heater contains a kit of accessories to help the installer make the water connections. An example of these connections and all the accessories supplied with the heater is shown on the drawing below:

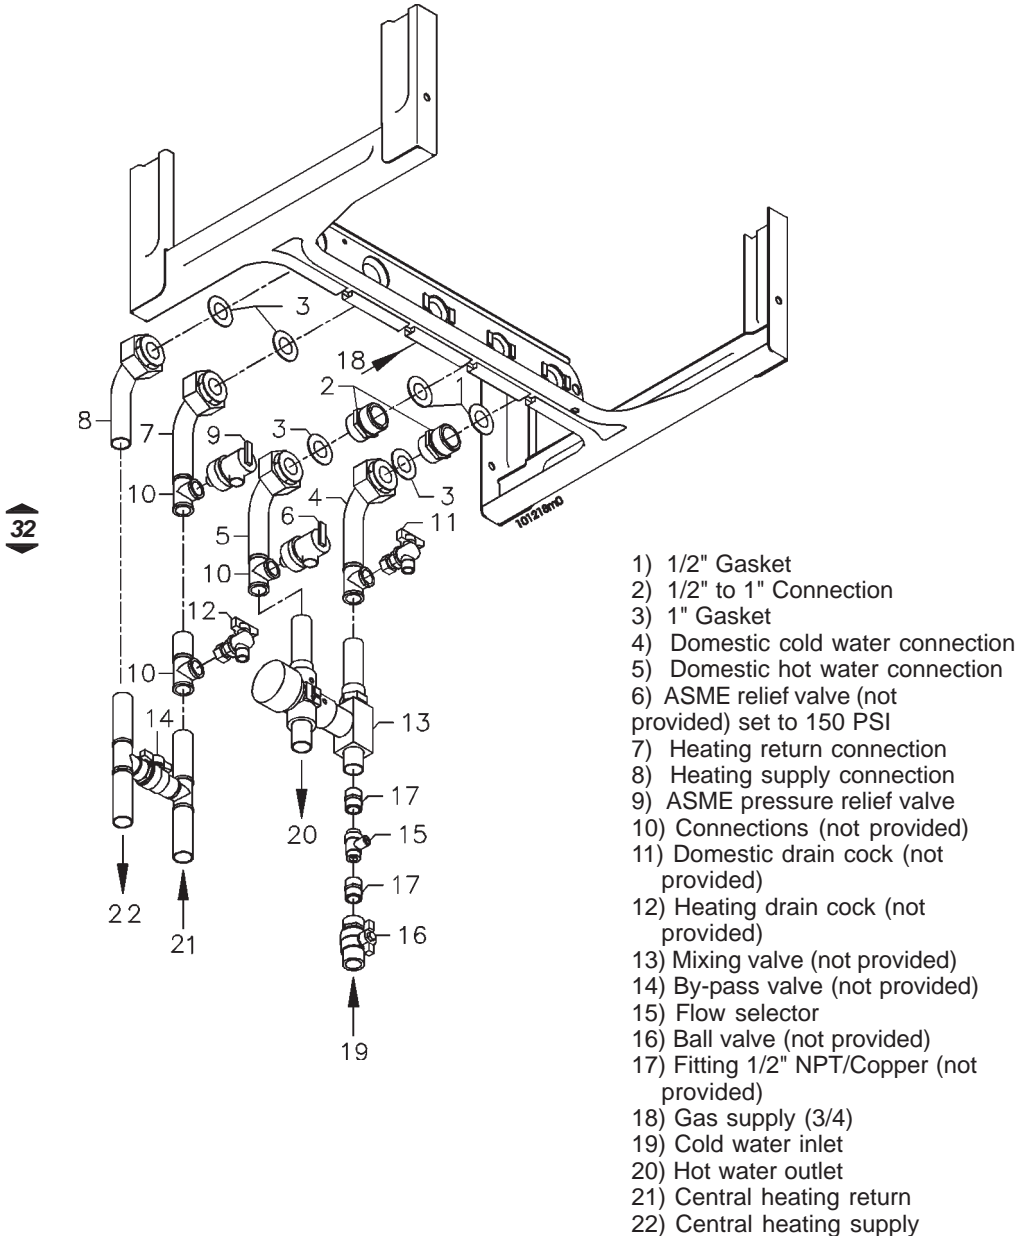

4.8 Water Connections for Model BTS

Each heater contains a kit of accessories to help the installer make the water connections. An example of these connections and all the accessories supplied with the heater is shown on the drawing below:

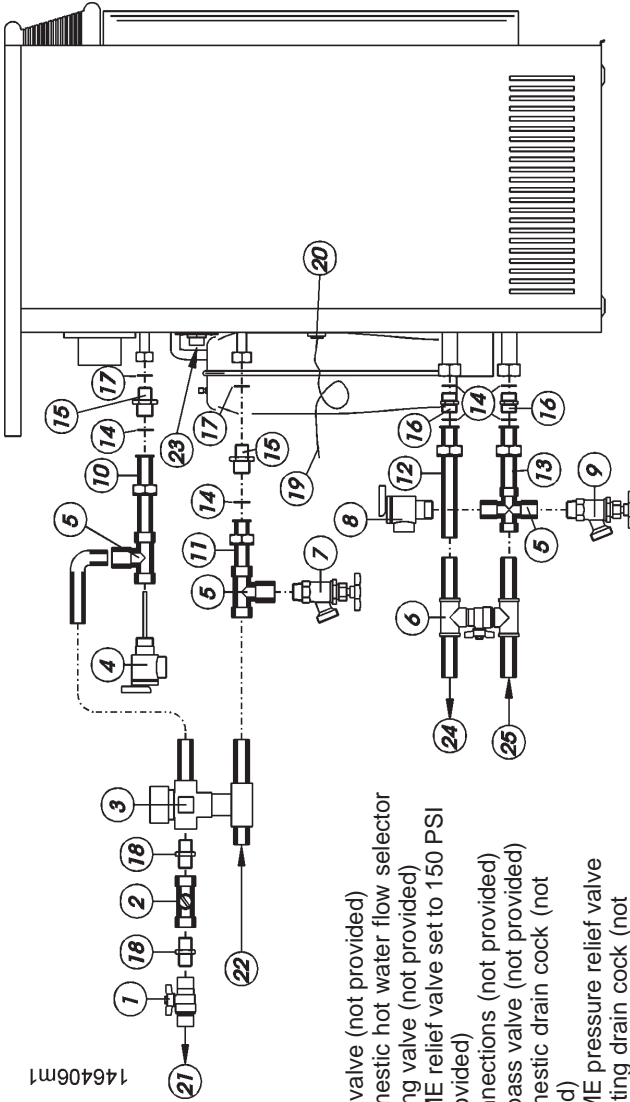

- 1) Ball valve (not provided)
- 2) Domestic hot water flow selector
- 3) Mixing valve (not provided)
- 4) ASME relief valve set to 150 PSI (not provided)
- 5) Connections (not provided)
- 6) By-pass valve (not provided)
- 7) Domestic drain cock (not provided)
- 8) ASME pressure relief valve
- 9) Heating drain cock (not provided)
- 10) Domestic Hot water connections
- 11) Domestic Cold water connections
- 12) Heating Supply connections
- 13) Heating Return connections
- 14) 1" Gasket
- 15) 1/2" to 1" Nipple
- 16) 1" Nipple
- 17) 1/2" Gasket
- 18) 1/2" Nipple (not provided)
- 19) Line voltage cable (not provided)
- 20) Fitting for block cable
- 21) Hot water outlet
- 22) Cold water inlet
- 23) Gas supply
- 24) Central heating supply
- 25) Central heating return

146406m1

A INSTALLATION INSTRUCTIONS


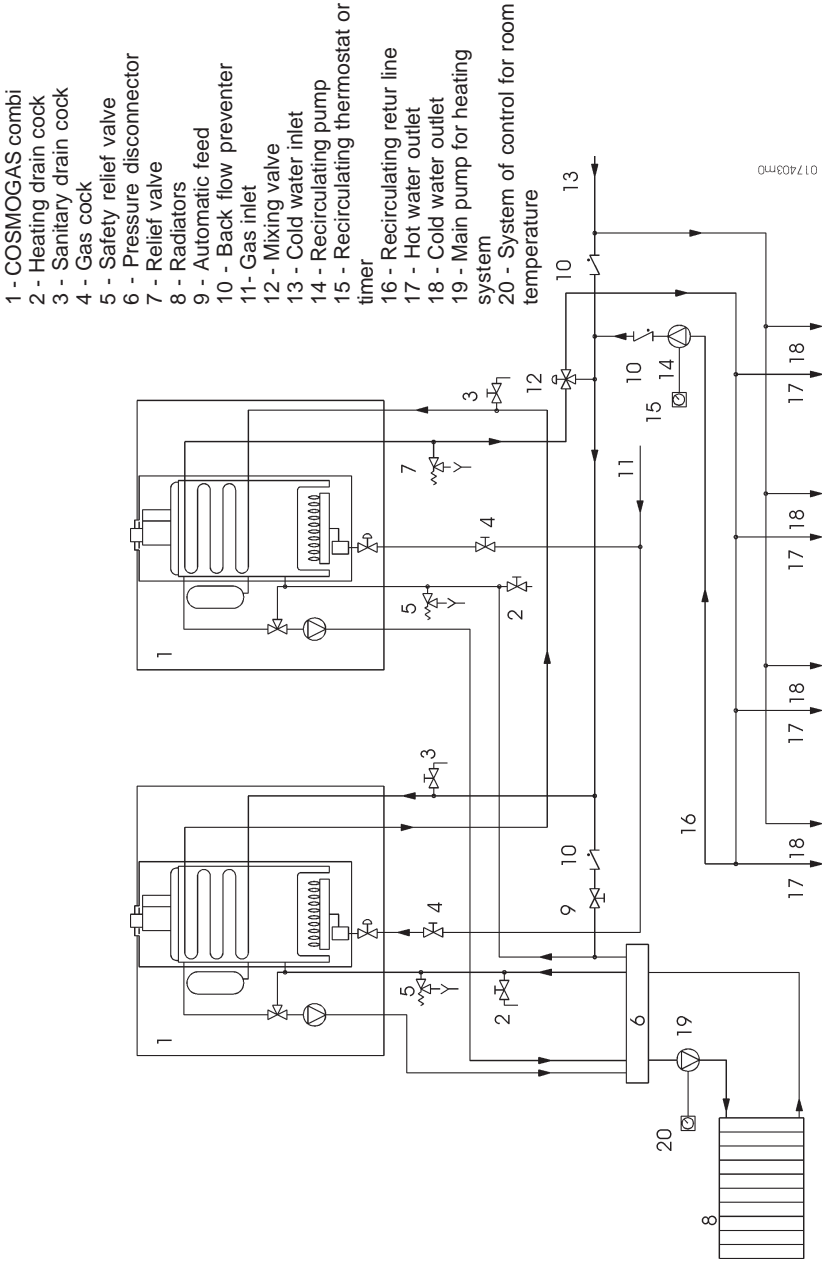


Figure 23 - Two (BMS or BTS model) heaters installation with domestic hot water recirculating system

A INSTALLATION INSTRUCTIONS

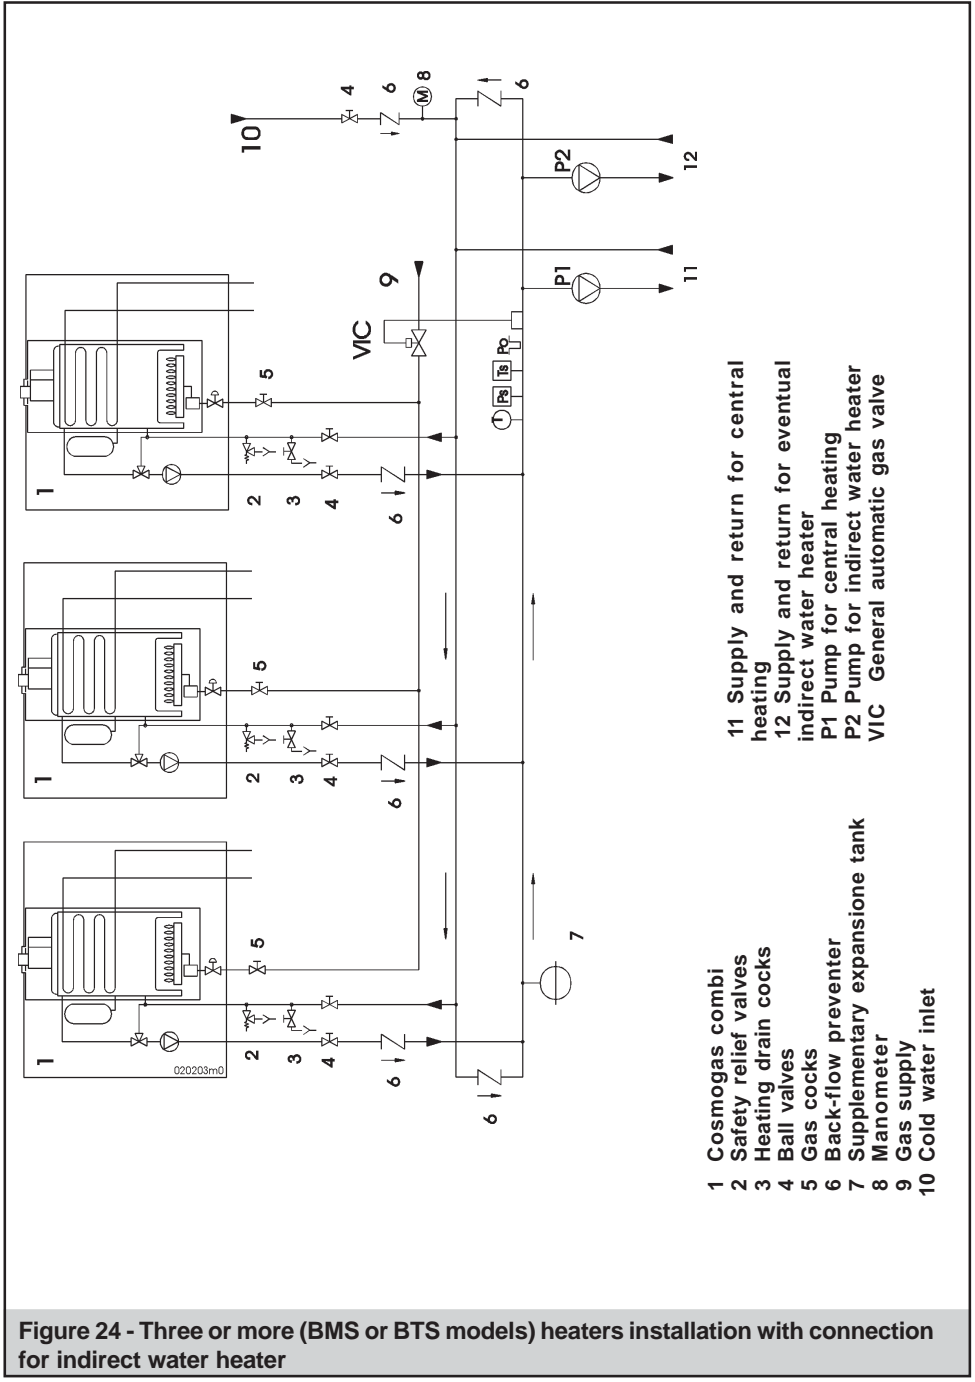


- 1 Cosmogas combi
- 2 Safety relief valves
- 3 Heating drain cocks
- 4 Ball valves
- 5 Gas cocks
- 6 Back-flow preventer
- 7 Supplementary expansion tank
- 8 Manometer
- 9 Gas supply
- 10 Cold water inlet
- 11 Supply and return for central heating
- 12 Supply and return for eventual indirect water heater
- P1 Pump for central heating
- P2 Pump for indirect water heater
- VIC General automatic gas valve

Figure 24 - Three or more (BMS or BTS models) heaters installation with connection for indirect water heater



A INSTALLATION INSTRUCTIONS


36

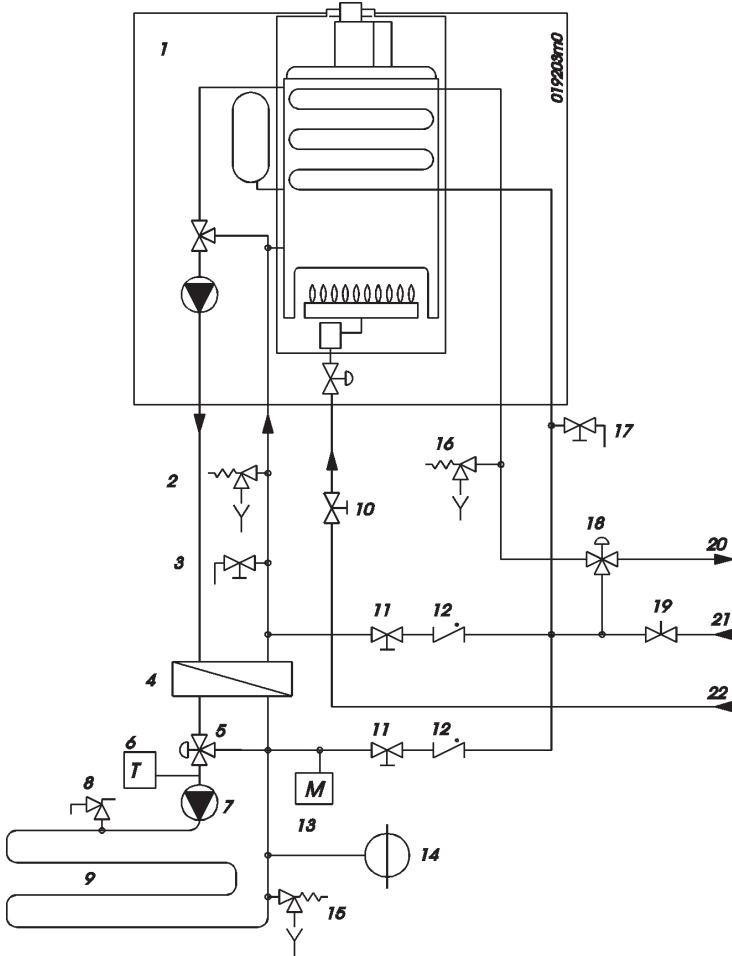

- | | |
|---|------------------------------|
| 1 Cosmogas combi | 13 Pressure gauge |
| 2 Safety relief valves | 14 Additional expansion tank |
| 3 Heating Drain cock | 15 Relief valve |
| 4 Plate heat exchanger | 16 Safety relief valve |
| 5 Three ways valve | 17 Sanitari drain cock |
| 6 Floor protection thermostat set to 104°F (40°C) | 18 Mixing valve |
| 7 Supplementary pump | 19 Flow restrictor |
| 8 Air vent | 20 Hot water outlet |
| 9 Radiant heating | 21 Cold water inlet |
| 10 Gas cock | 22 Gas inlet |
| 11 Automatic feed | |
| 12 Back flow preventer | |

Figure 25 - Example of (BMS or BTS model) heater installation for radiant heating

A INSTALLATION INSTRUCTIONS

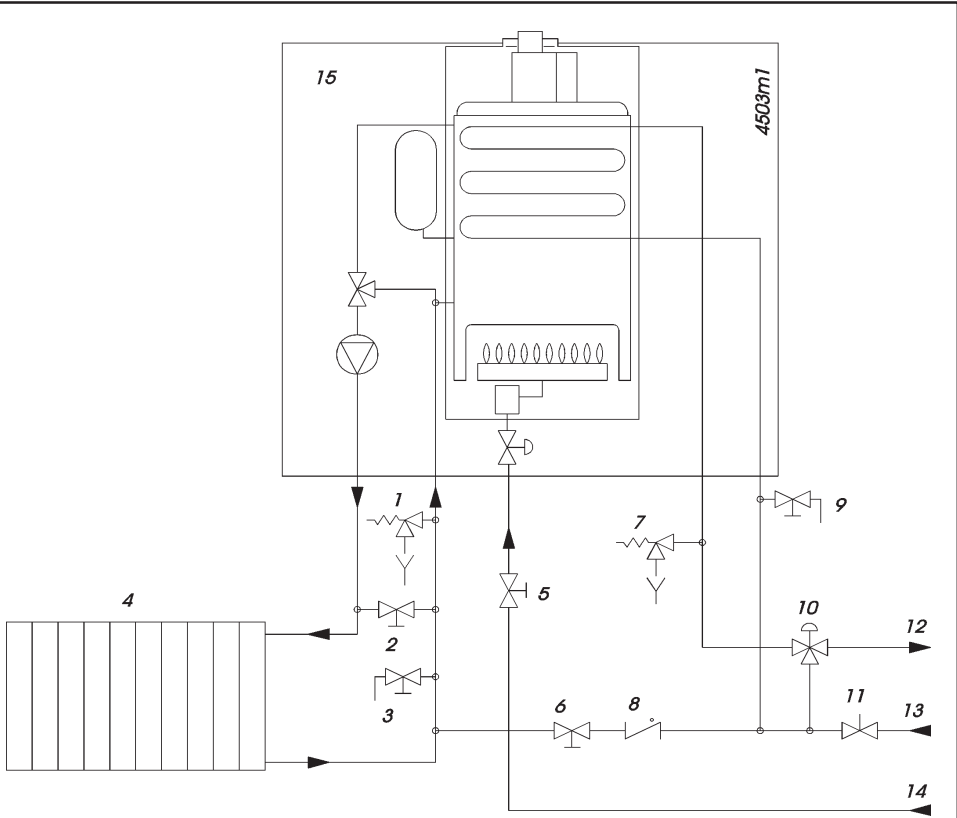


- 1 Safety relief valve
- 2 By-pass valve
- 3 Heating drain cock
- 4 Radiators
- 5 Gas cock
- 6 Automatic feed
- 7 Safety relief valve

- 8 Back-flow preventer
- 9 Sanitary drain cock
- 10 Mixing valve
- 11 Flow restrictor
- 12 Hot water outlet
- 13 Cold water inlet
- 14 Gas supply

Figure 26 - Example of (BMS or BTS model) heater installation for radiators


A INSTALLATION INSTRUCTIONS

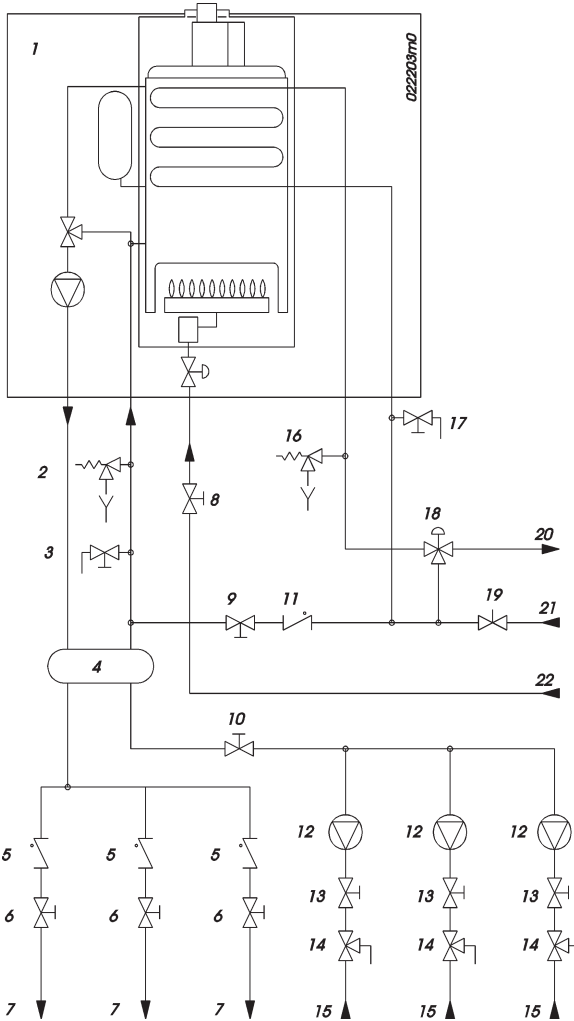

- | | |
|--|--|
| <ul style="list-style-type: none"> 1 Cosmogas combi 2 Safety relief valve 3 Heating drain cock 4 Pressure disconnector 5 Flow checks 6 Optional ball valve to isolate heater 7 Supply piping to zones 8 Gas cock 9 Automatic feed 10 Optional ball valve 11 Back-flow preventer | <ul style="list-style-type: none"> 12 Added system pump 13 Optional ball valve 14 Tees with drains to bleed zones 15 Return piping from zones 16 Sanitary relief valve 17 Sanitary drain cock 18 Mixing valve 19 Flow restrictor 20 Hot water outlet 21 Cold water inlet 22 Gas inlet |
|--|--|

Figure 27 - Zoning with pumps - Multizone hydronic piping. For BMS or BTS model

A INSTALLATION INSTRUCTIONS

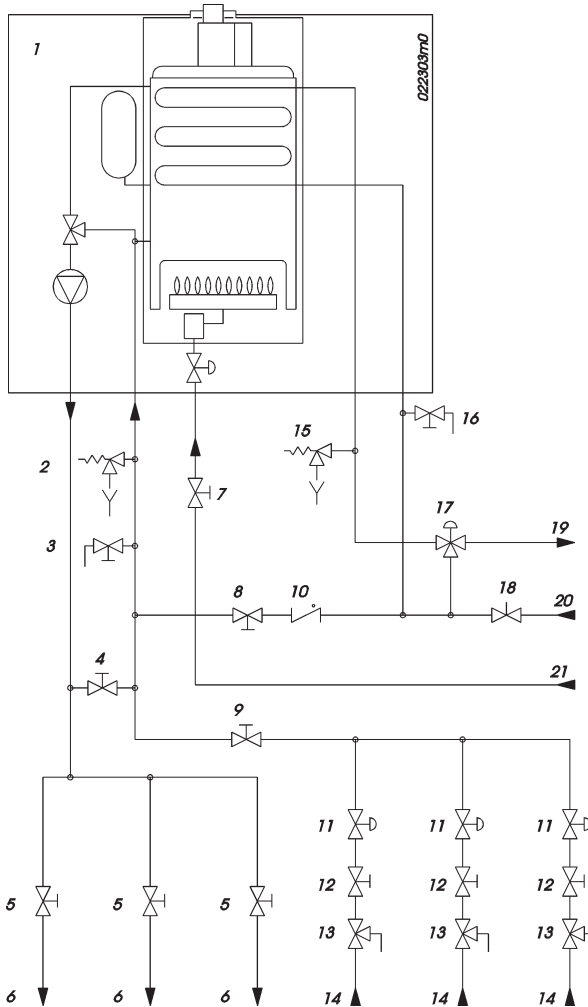

- 1 Cosmogas combi
- 2 Safety relief valve
- 3 Heating drain cock
- 4 By-pass valve
- 5 Optional ball valve to isolate heater
- 6 Supply piping to zones
- 7 Gas cock
- 8 Automatic feed
- 9 Ball valve
- 10 Back-flow preventer

- 11 Zone valves
- 12 Optional ball valve
- 13 Tees with drains to bleed zones
- 14 Return piping from zones
- 15 Sanitary relief valve
- 16 Sanitary drain cock
- 17 Mixing valve
- 18 Flow restrictor
- 19 Hot water outlet
- 20 Cold water inlet
- 21 Gas inlet

Figure 28 - Zoning with zone valves - Multizone hydronic piping. For BMS or BTS model.

A INSTALLATION INSTRUCTIONS

5 REGULATING THE DOMESTIC HOT WATER

The heater temperature control knob is adjusted to its lowest temperature position when shipped from the factory. Prior to starting heater, it should be adjusted to a starting point of **120°F** as shown on the thermostat. After installing the space/water heater, it is necessary to regulate the flow rate of the domestic hot water so as to give a **75°F** rise. For this function, you need to use a flow meter and a thermometer. Place the flow meter, under a hot water faucet, closest to the heater and open the faucet until water temperature is stabilized. The difference between cold and hot water should be approximately **75°F**. Increase or decrease the water flow by regulating the incoming cold water to the heater with the DHW flow restrictor.

In any case, it is necessary to install a mixing valve external of the heater.

6 BURNER

The burner, depicted below, is made of stainless steel and can be used with both **Natural Gas (NAT)** or **Propane Gas (LP)**.

6.1 Changing the Gas Type

To convert the heater from one gas type to another (**NAT** to **LP** or **LP** to **NAT**). Conversion kits are available at an additional cost..

6.2 Adjusting Gas Flow and Pressure to the Burner

The gas pressure is calibrated in the factory. If any corrections are needed use a manometer and adjust the pressure according to Table 1 (back of manual). Please refer to Figure 22, below.

Loosen the screw (B) on the bottom of the burner and place one of the manometer tubes on (B). Turn the burner on and compare the pressure found with the value given in Table 1. If any adjustments are needed remove the protection cap (A) and turn the burner pressure adjustment screw until the value given in Table 1 is reached. (Turn the screw clockwise to increase the flame and counter-clockwise to decrease-it). Tighten the screw that closes the burner gas pressure (B).

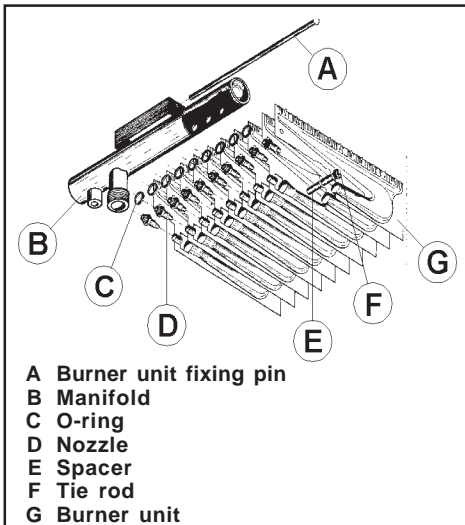


Fig.21 - Exploded view of the burner

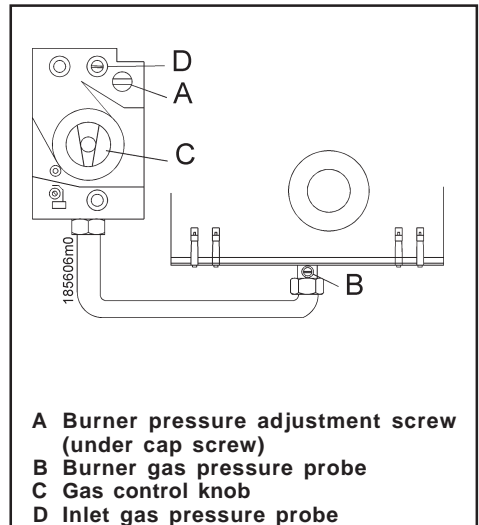


Figure 22 - Gas valve

A INSTALLATION INSTRUCTIONS

7 WIRING DIAGRAMS

If any of the original wire as supplied with the appliance must be replaced, it must be replaced with **18 AWG** wire or its equivalent.


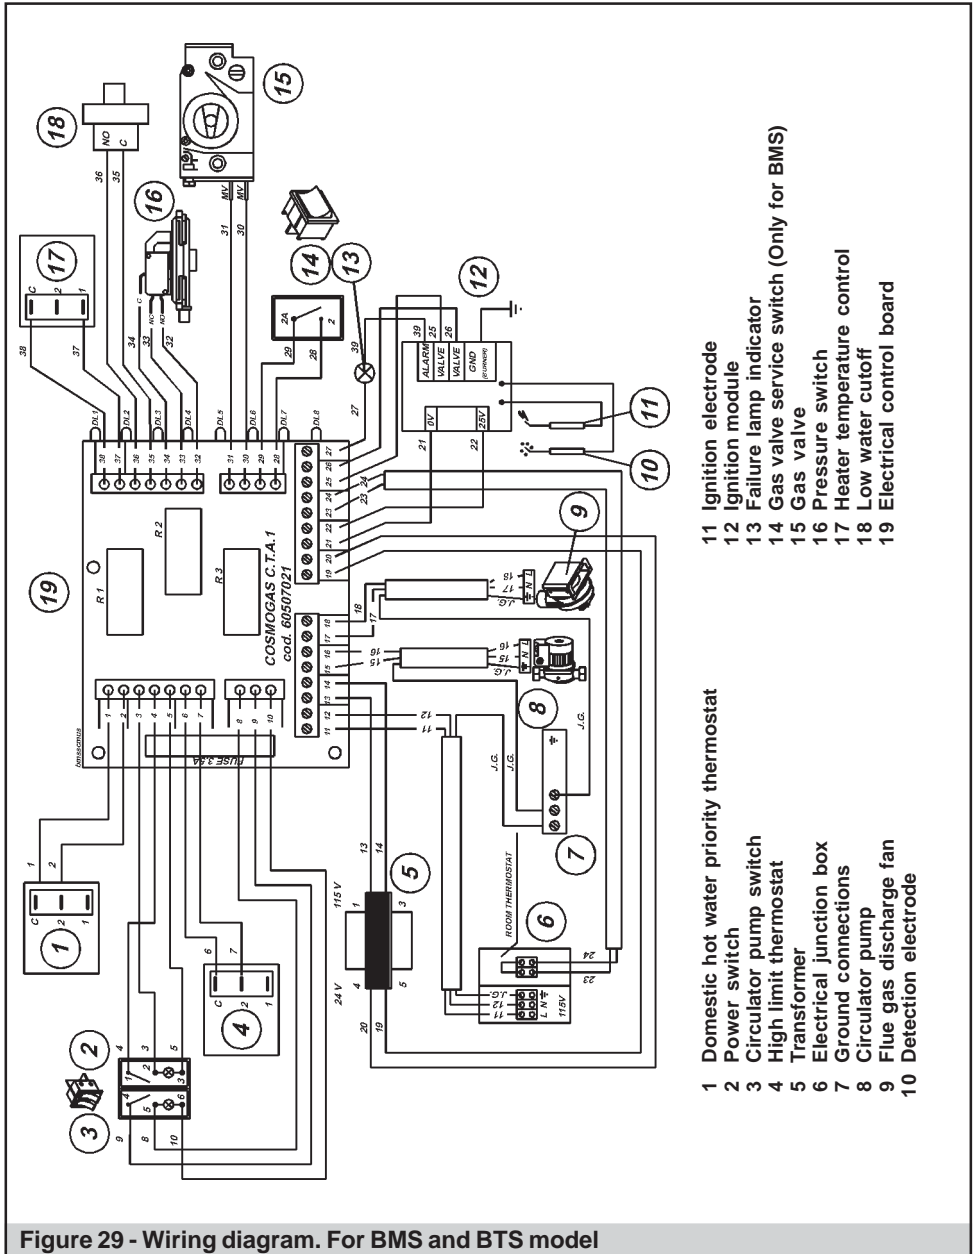


Figure 29 - Wiring diagram. For BMS and BTS model




A INSTALLATION INSTRUCTIONS

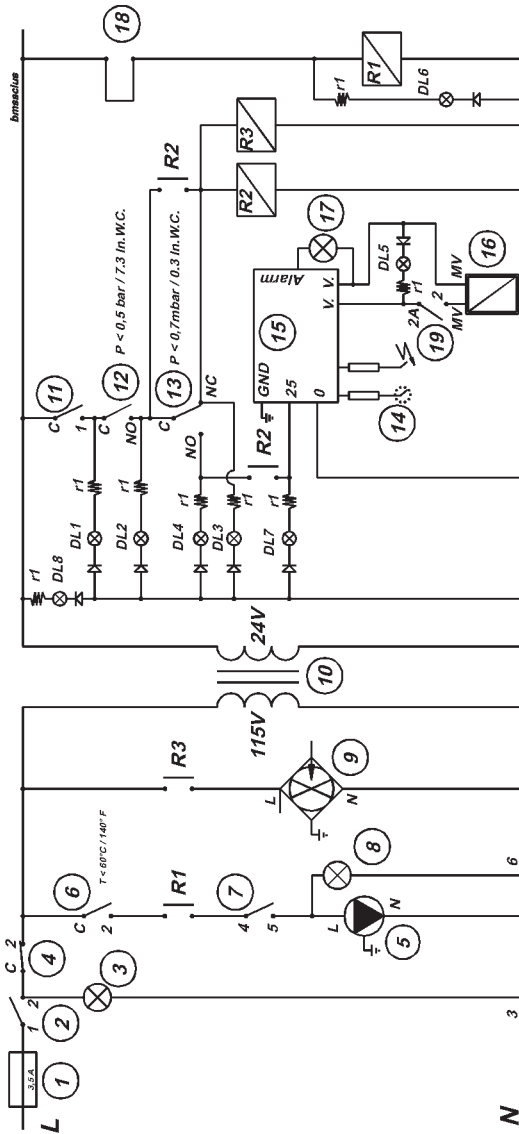

- | | | | |
|-----|--|----|---|
| DL1 | Heater temperature lamp control | 6 | Domestic hot water priority thermostat |
| DL2 | Low water cutoff lamp control | 7 | Circulator pump switch |
| DL3 | NC (Normally Close) pressure switch lamp control | 8 | Circulator pump switch light |
| DL4 | NO (Normally Open) pressure switch lamp control | 9 | Flue gas discharge fan |
| DL5 | Gas valve lamp control | 10 | Transformer |
| DL6 | Room thermostat lamp control | 11 | Heater temperature control |
| DL7 | Ignition module lamp control | 12 | Low water cutoff |
| DL8 | Transformer lamp control | 13 | Pressure switch |
| r1 | Resistor 780 Ohm | 14 | Ignition and detection electrodes |
| 1 | Fuse | 15 | Ignition module |
| 2 | Power switch | 16 | Gas valve |
| 3 | Pilot light of power switch | 17 | Failure lamp indicator |
| 4 | High limit thermostat | 18 | Room thermostat connection |
| 5 | Circulator pump | 19 | Gas valve service switch (only for BMS) |

Figure 30 - Functional wiring diagram. For BMS and BTS model


A INSTALLATION INSTRUCTIONS

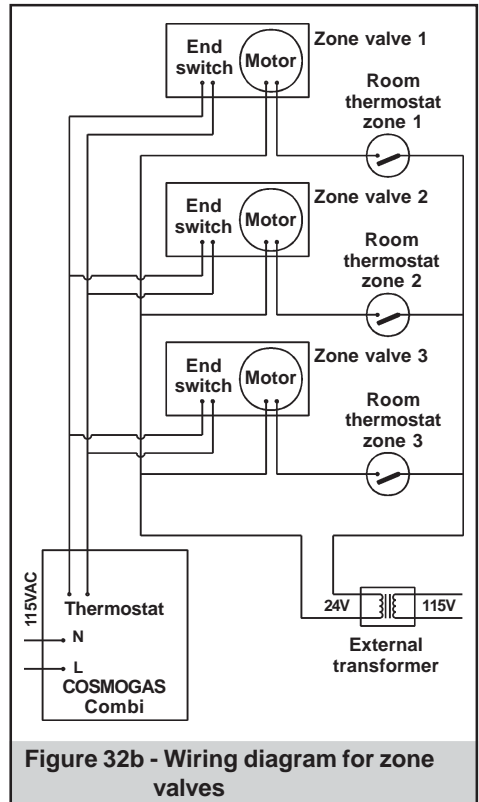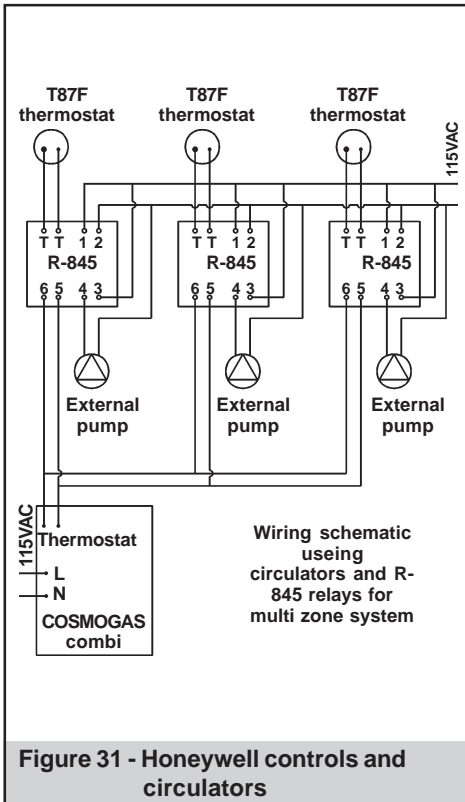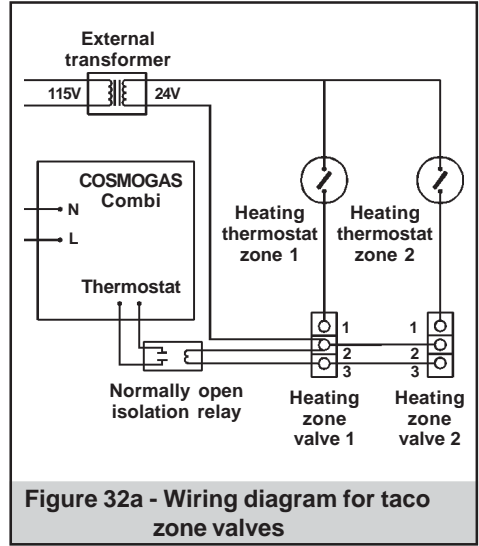

B OPERATING AND MAINTENANCE INSTRUCTIONS for BMS

Qualified personnel must carry out installation, calibration or alterations to the gas apparatus, or to convert it from one gas type to another. Conversion kits are available, (optional).

9 BMS model; INSTRUCTION FOR USE

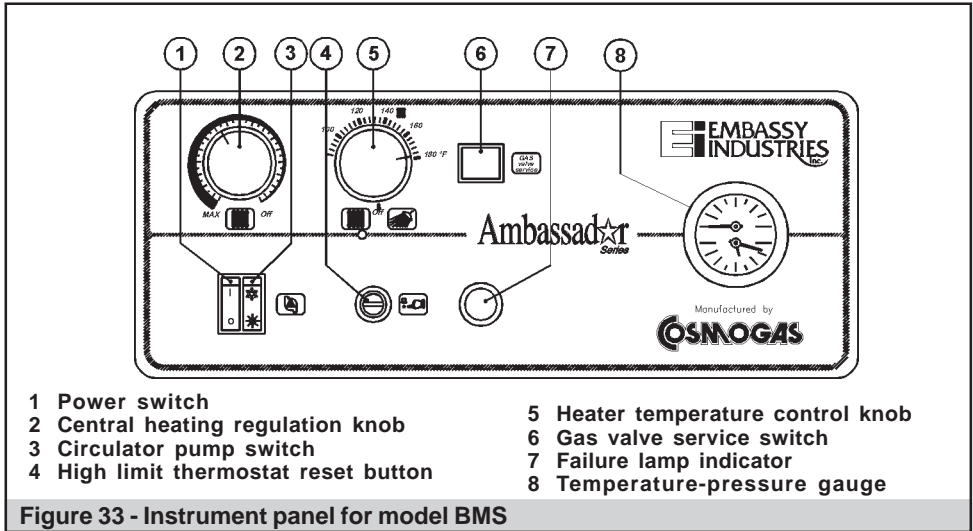

- | | |
|--------------------------------------|-----------------------------------|
| 1 Power switch | 5 Heater temperature control knob |
| 2 Central heating regulation knob | 6 Gas valve service switch |
| 3 Circulator pump switch | 7 Failure lamp indicator |
| 4 High limit thermostat reset button | 8 Temperature-pressure gauge |

Figure 33 - Instrument panel for model BMS

9.1 Start-Up Instructions

Check that the system has been filled and purged. The indicator on the pressure gauge “8”, (fig.33), should show **15-25 psi**. To properly purge the heater and system of air it is imperative that these basic instructions be followed.

The automatic feed should have a fast fill feature. There must be an isolation valve installed so that when it is closed it will direct the incoming water flow through the system and heater in the normal flow pattern and out a drain cock installed at the end of the loop.

- Attach a hose to the heating drain cock and run the hose to a suitable drain.
- Open heating drain cock.
- Open the automatic feed using the fast fill feature and allow the system to fill purge. On multi-zone systems, each zone must be purged separately with the other zones shut off.

9.2 Checks Prior to Ignition

Prior to ignition, it is necessary to carry out a few checks.

- Check that the appliance is electrically connected to a voltage of **115V 60Hz**. Grounding is compulsory likewise the installation of a switch with fuse immediately upstream from the heater.

- Check that the heater is connected properly to the flue, it must not be clogged. The height and cross section must both be adequate.

9.3 Ignition Procedure

- Open the gas cock.
- Turn the power switch on, (fig.33, item 1).
- Position the heater temperature control knob “5” (fig.33) on **120°F**. The ignition module will provoke sparks for burner ignition for about 11 seconds.

If, during this length of time it does not start up because there is still air in the gas line, the heater will shutdown and the indicator light of the failure lamp indicator “7” (fig.33) signaling the state, will come on.

Turn the heater temperature control knob “5” (fig.33) to position “0” and repeat operation c). The ignition module will attempt a new ignition automatically. Should overheating occur or the gas supply fail to shut off, turn off the manual gas control valve to the appliance.

It is important, especially in the heating season, to keep the heater temperature control knob “5” (fig.33) on **150°F** seeing as the circulator pump starts working at **140°F**. During the summer season, if the water is hot enough, this knob can be adjusted to a lower temperature.

B OPERATING AND MAINTENANCE INSTRUCTIONS for BMS

9.4 Summer-Winter Mode

By means of the circulator pump switch, (fig.33, item 3), you can change over from the summer to the winter mode, as explained below.

In the **summer**, the switch is turned **off**, allowing the production of **domestic hot water only**.

In the **winter** or whenever central heating is required, the circulator pump switch must be turned **on**.

9.5 Adjusting Central Heating

This is done by turning the central heating regulation knob "2" (fig.33) which optimizes the central heating system, controlling radiator temperature. It is advisable, during the in-between seasons, (spring and autumn), when you want only warm radiators, to turn the knob to minimum. In the winter you will have to turn it to maximum, leaving the heater temperature control knob "5" (fig.33) on 150°F.

If you want hotter central heating, adjust the above knob by turning it to a higher temperature setting. It is however advisable to install a room thermostat well away from heating elements, doors and windows.

9.6 Manual Reset High-Limit Thermostat

This device acts on the heater, turning the burner off completely if heater temperature exceeds 210°F. The user can see this because the burner does not turn on any more even if heater temperature is low.

To restore the heater to its normal functioning condition, unscrew and remove the protection cap of high limit thermostat reset button "4", (fig.33). Then press it. Use a pen or a skinny object to manually reset (the high limit thermostat will not reset unless the button is completely pressed). If the high limit thermostat continues to trigger, call a licensed authorized personnel.

9.7 Resetting the Ignition Module

The ignition module, (fig.1, item 24), carries out numerous checks on heater functioning: on the burner and on the flame detection system. When the ignition module detects that one of these components is malfunctioning, it stops the heater. To restart, Turn the heater temperature control knob "5" (fig.33) to position "0" and reposition it on 150°F.

Once this operation has been done and if the heater does not start up or if this situation repeats often, call a licensed authorized personnel.

9.8 Heating Circulator Pump

The circulator pump will **only** start working when heater the temperature reaches approximately 140°F and the circulator pump switch, (fig.33, item 3), is in the winter position (on position).

Initially, the circulator pump could make noises, which are due to pockets of air left inside the water circuit; they will disappear soon without having to do anything. In any case, check that the cap on the automatic air vent, (fig, 1, item 7) is open.

9.9 Low water cut-off device

This device (fig.1, item 36) shuts off the gas to the heater if the pressure inside the heating circuit goes below 8 psi (0.5 bar). This can be verify by checking the reading on the pressure gauge "8" (fig.33). The heater will not start in this state. To reactivate the appliance you need to bring up the pressure inside the heating circuit to 15 psi (1 bar).

9.10 Shut-Down Procedure

To stop the supply of gas and consequently turn the system off, turn heater temperature control knob "5" (fig.33) to position 0.

Turn power switch "1" (fig.33) off and close the gas cock.

9.11 Maintenance

The heater requires no specific maintenance; to keep it in good working order, however, it is advisable to have the flue pipe into the heat exchanger and burner cleaned at the beginning of each season.

To clean proceed in this order:

- a) Remove the heater jacket, the burner, the flue gas discharge fan and the turbulators.
- b) With a plastic-bristled cylindrical brush, brush the insides of the flue gas pipes and the turbulators.
- c) Vacuum away the burnt deposits from the burner and from the ignition and detection electrodes.

However, for this cleaning job it is necessary to call a licensed authorized technician.

9.12 Draining water from the heater


- a) Turn off the main cold water supply valve.
- b) Open the heating drain cock.
- c) Open heating air vents.
- d) Open the sanitary drain cock.
- e) Open all hot water faucets to allow air to enter into the pipes.

The heater holds approximately 4 gallons of water, not including the water capacity of the other system components and piping.

C OPERATING AND MAINTENANCE INSTRUCTIONS for BTS

Qualified personnel must carry out installation, calibration or alterations to the gas apparatus, or to convert it from one gas type to another. Conversion kits are available, (optional).

10 - BTS model - INSTRUCTIONS FOR USE

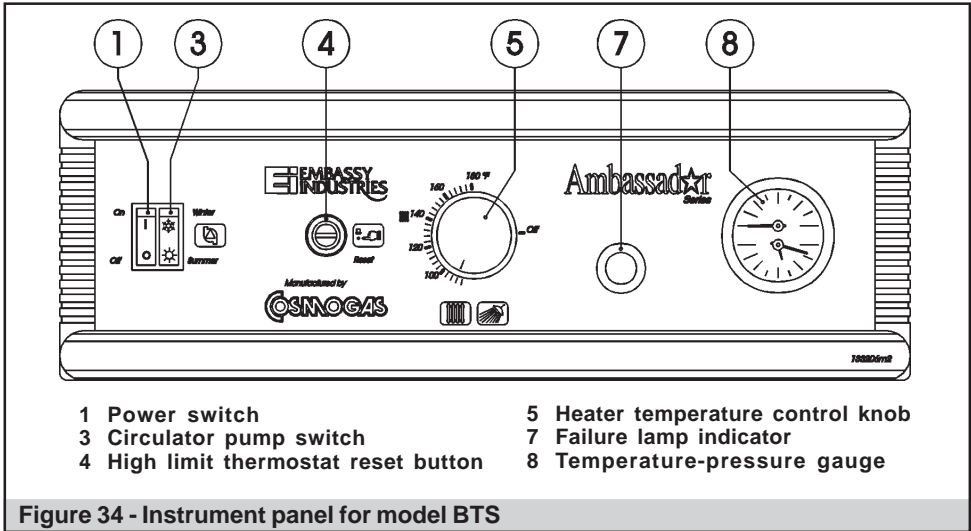

10.1 Start-Up Instructions

Check that the system has been filled and purged. The indicator on the pressure gauge "8", (fig.34), should show **15-25 psi**. To properly purge the heater and system of air it is imperative that these basic instructions be followed. The automatic feed should have a fast fill feature. There must be an isolation valve installed so that when it is closed it will direct the incoming water flow through the system and heater in the normal flow pattern and out a drain cock installed at the end of the loop.

a) Attach a hose to the heating drain cock and run the hose to a suitable drain.

b) Open heating drain cock.

c) Open the automatic feed using the fast fill feature and allow the system to fill purge. On multi-zone systems, each zone must be purged separately with the other zones shut off.

10.2 Checks Prior to Ignition

Prior to ignition, it is necessary to carry out a few checks.

a) Check that the appliance is electrically connected to a voltage of **115V 60Hz**.

Grounding is compulsory likewise the installation of a switch with fuse immediately upstream from the heater.

b) Check that the heater is connected properly

to the flue, it must not be clogged. The height and cross section must both be adequate.

10.3 Ignition Procedure

a) Open the gas cock.

b) Turn the power switch on, (fig.34, item 1).

c) Position the heater temperature control knob "5" (fig.34) on **120°F**. The ignition module will provoke sparks for burner ignition for about 11 seconds.

If, during this length of time it does not start up because there is still air in the gas line, the heater will shutdown and the indicator light of the failure lamp indicator "7" (fig.34) signaling the state, will come on.

Turn the heater temperature control knob "5" (fig.34) to position "0" and repeat operation c). The ignition module will attempt a new ignition automatically. Should overheating occur or the gas supply fail to shut off, turn off the manual gas control valve to the appliance.

It is important, especially in the heating season, to keep the heater temperature control knob "5" (fig.34) on **150°F** seeing as the circulator pump starts working at **140°F**. During the summer season, if the water is hot enough, this knob can be adjusted to a lower temperature.

10.4 Summer-Winter Mode

By means of the circulator pump switch, (fig.34, item 3), you can change over from the summer to the winter mode, as explained below.

In the **summer**, the switch is turned **off**, allowing the production of **domestic hot water only**.

In the **winter** or whenever central heating is required, the circulator pump switch must be turned **on**.

10.5 Adjusting Central Heating

This is done by turning the central heating regulation knob "21" (fig.34) which optimizes the central heating system, controlling radiator temperature. It is advisable, during the in-between seasons, (spring and autumn), when you want only warm radiators, to turn the knob to minimum. In the winter you will have to turn it to maximum, leaving the heater temperature control knob "5" (fig.34) on **150°F**.

If you want hotter central heating, adjust the above knob by turning it to a higher temperature setting. It is however advisable to install a room thermostat well away from heating elements, doors and windows.

10.6 Mnual Reset High-Limit Thermostat

This device acts on the heater, turning the burner off completely if heater temperature exceeds **210°F**. The user can see this because the burner does not turn on any more even if heater temperature is low.

To restore the heater to its normal functioning condition, unscrew and remove the protection cap of high limit thermostat reset button "4", (fig.34). Then press it. Use a pen or a skinny object to manually reset (the high limit thermostat will not reset unless the button is completely pressed). If the high limit thermostat continues to trigger, call a licensed authorized personnel.

10.7 Resetting the Ignition Module

The ignition module, (fig.3, item 24), carries out numerous checks on heater functioning: on the burner and on the flame detection system. When the ignition module detects that one of these components is malfunctioning, it stops the heater. To restart, Turn the heater temperature control knob "5" (fig.34) to position "0" and reposition it on **150°F**.

Once this operation has been done and if the heater does not start up or if this situation repeats often, call a licensed authorized personnel.

10.8 Heating Circulator Pump

The circulator pump will **only** start working when heater the temperature reaches approximately **140°F** and the circulator pump switch, (fig.34, item 3), is in the winter position (on position).

Initially, the circulator pump could make noises, which are due to pockets of air left inside the water circuit; they will disappear soon without having to do anything. In any case, check that the cap on the automatic air vent, (fig, 4, item 7) is open.

10.9 Low water cut-off device

This device (fig.3, item 36) shuts off the gas to the heater if the pressure inside the heating circuit goes below 8 psi (0.5 bar). This can be verify by checking the reading on the pressure gauge "8" (fig.34). The heater will not start in this state. To reactivate the appliance you need to bring up the pressure inside the heating circuit to 15 psi (1 bar).

10.10 Shut-Down Procedure

To stop the supply of gas and consequently turn the system off, turn heater temperature control knob "5" (fig.34) to position **0**.

Turn power switch "1" (fig.34) off and close the gas cock.

10.11 Maintenance

The heater requires no specific maintenance; to keep it in good working order, however, it is advisable to have the flue pipe into the heat exchanger and burner cleaned at the beginning of each season.

To clean proceed in this order:

- a) Remove the upper heater jacket, the burner, the flue gas discharge fan and the turbulators.
- b) With a plastic-bristled cylindrical brush, brush the insides of the flue gas pipes and the turbulators.
- c) Vacuum away the burnt deposits from the burner and from the ignition and detection electrodes.

However, for this cleaning job it is necessary to call a licensed authorized technician.

10.12 Draining water from the heater


- a) Turn off the main cold water supply valve.
- b) Open the heating drain cock.
- c) Open heating air vents.
- d) Open the sanitary drain cock.
- e) Open all hot water faucets to allow air to enter into the pipes.

The heater holds approximately 4 gallons of water, not including the water capacity of the other system components and piping.

D TROUBLESHOOTING

11 Troubleshooting Sequence of Operation to Light the Burner


Start

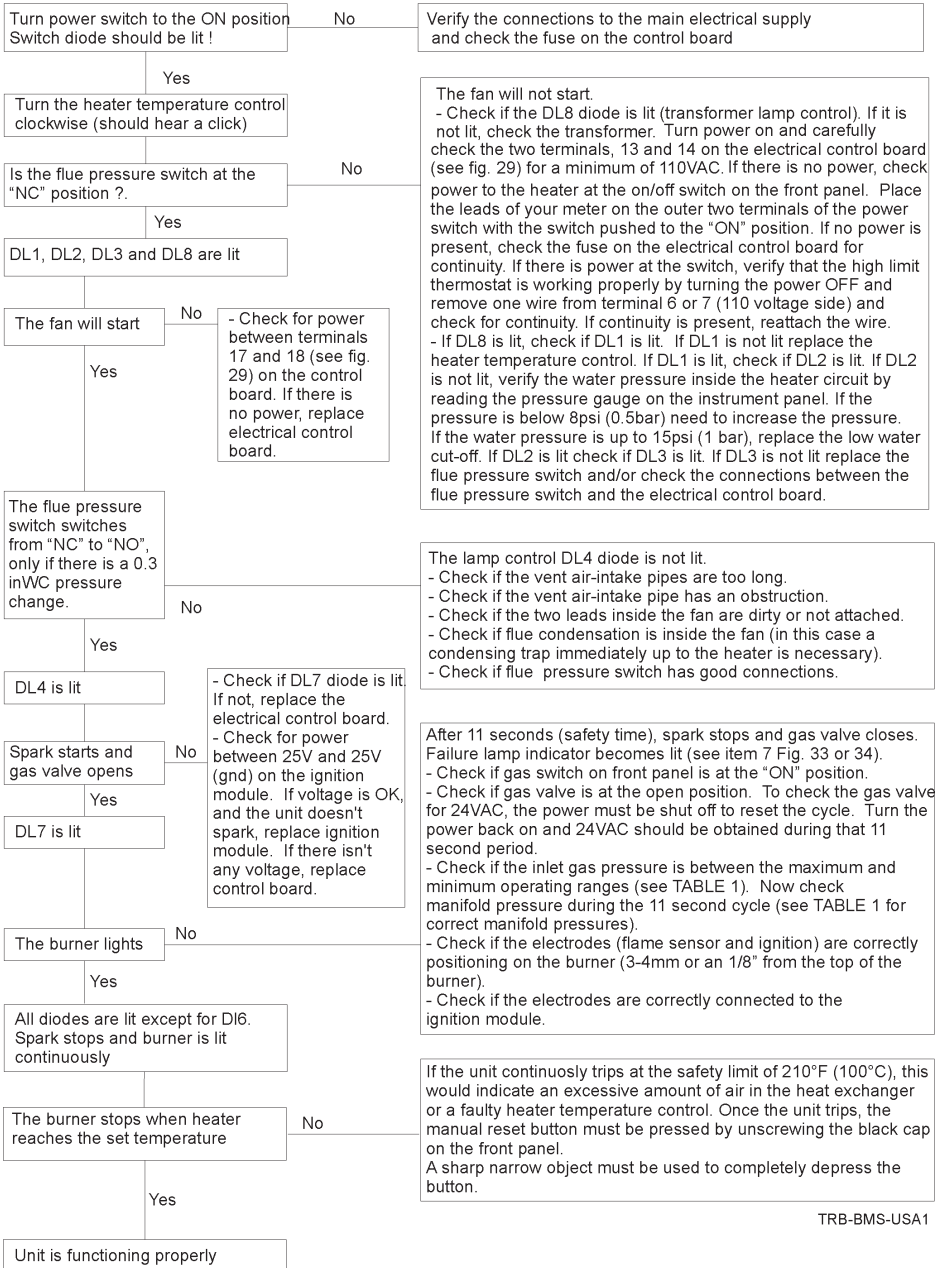

D TROUBLESHOOTING


Troubleshooting Sequence of Operation for a Call for Heat

Start

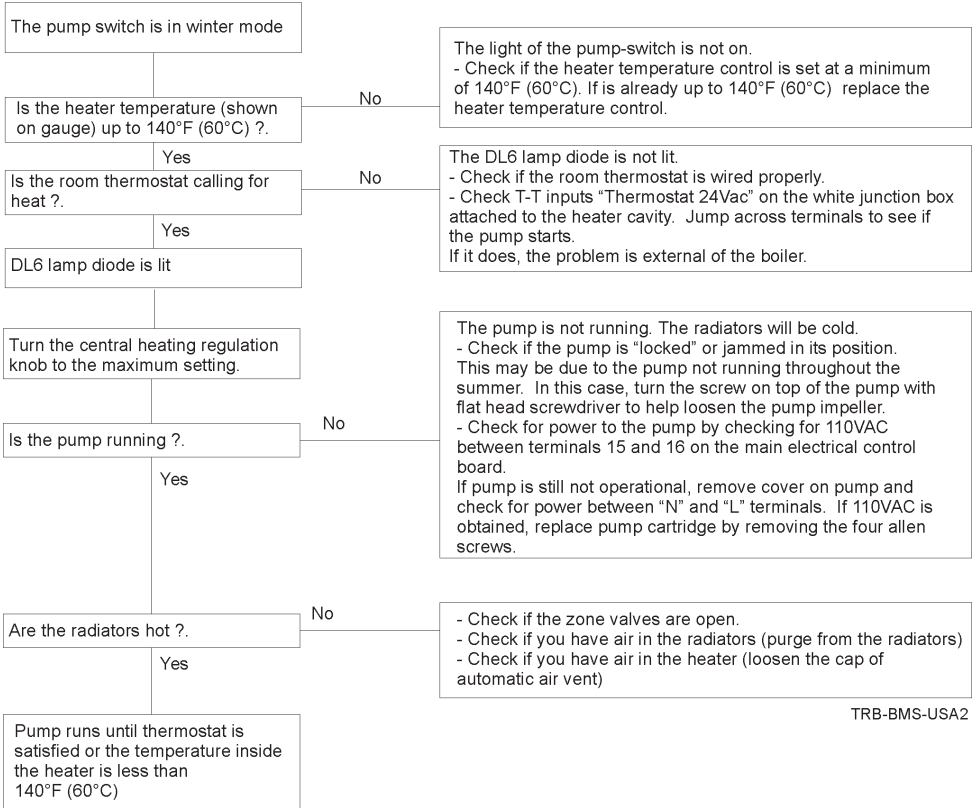

Troubleshooting Sequence of Operation for Domestic Hot Water

Start

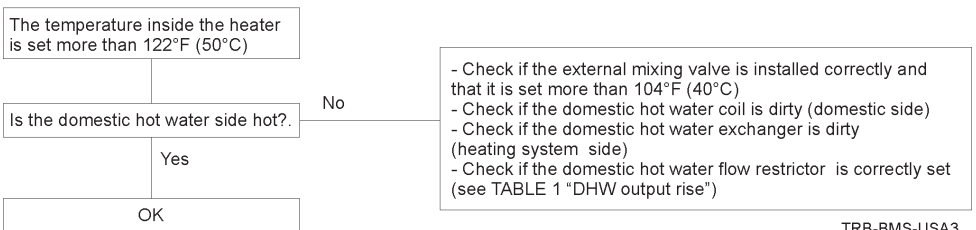

D TROUBLESHOOTING

PROBLEMS	CAUSES	CHECKS (IF NECESSARY)	REMEDIES (IF NECESSARY)
the pilot light of power switch is off	there isn't electrical supply	check the electrical supply level	restore the electrical supply
	the fuse doesn't work	check the fuse	replace the fuse
	the power switch is off	check that the power switch is on	turn the power switch on
	the power switch doesn't work	check the power switch operating	replace the power switch
	pilot light of power switch doesn't work	check the pilot light of power switch operating	replace the power switch
the transformer lamp control, (DL8), is off	115V isn't reaching the transformer input	check the transformer has 115V input	restore the electrical supply
	the transformer doesn't work	check the transformer has 24V output	replace the transformer
	the DL8 doesn't work	check DL8 operating	replace the electrical control board
the heater temperature lamp control, (DL1) is off	the heater temperature control contacts are open	check that the heater has the required temperature	increase the heater temperature set
	24V isn't reaching "C" contact of heater temperature control	check 24V presence on "C" heater temperature control contact	restore the electrical connection
	the heater temperature control doesn't work	check heater temperature control operating	replace the heater temperature control
	the DL1 doesn't work	check DL1 operating	replace the electrical control board
the low water cutoff lamp control, (DL2), is off	there isn't enough water in the heater	check there's enough water in the heater	restore the water right level in the heater
	low water cutoff doesn't work	check the low water cut-off operating	replace the low water cut-off
	DL2 doesn't work	check DL2 operating	replace the electrical control board
the NC pressure switch lamp control, (DL3), is off	24V isn't reaching the "C" contact of pressure switch	check there's 24V on the "C" contact of pressure switch	restore 24V on the "C" contact of pressure switch
	pressure switch contact is on "NO"	check the flue gas discharge fan is off	replace pressure switch
	DL3 doesn't work	check DL3 operating	replace electrical control board
the NO pressure switch lamp control, (DL4), is off	flue gas discharge fan is off	check the flue gas discharge fan is on	replace the flue gas discharge fan
	115V isn't reaching the flue gas discharge fan	check 115V is reaching the flue gas discharge fan contacts	restore the electrical supply
	pressure switch contact is on "NC"	check the pressure switch operating	replace the pressure switch
	DL4 doesn't work	check DL4 operating	replace the electrical control board
the ignition module lamp control, (DL7), is off	24V isn't reaching ignition module	check 24V is reaching ignition module contacts	restore 24V
	DL7 doesn't work	check DL7 operating	replace the electrical control board
the gas valve lamp control, (DL5), is off	24V isn't reaching gas valve	check 24V is reaching gas valve contacts	replace ignition module
	DL5 doesn't work	check DL5 operating	replace the electrical control board
	DL5 doesn't work	check DL5 operating	replace the electrical control board
the room thermostat lamp control, (DL6), is off	room thermostat contacts are open, (if any)	check room thermostat operating	replace the room thermostat
	room thermostat doesn't work, (if any)	check room thermostat operating	replace the room thermostat
	DL6 doesn't work	check DL6 operating	replace the electrical control board
the circulator pump switch light is off	circulator pump switch is off	check heater temperature is higher than 140°F	check heater temperature is higher than 140°F
	dhw priority thermostat contacts are open	check heater temperature is higher than 140°F	increase the heater temperature, (if necessary)
	room thermostat contacts are open	check room thermostat operating	replace the room thermostat
	circulator pump switch light doesn't work	check circulator pump switch light operating	replace the circulator pump switch

E IMPORTANT INFORMATION FOR THE CUSTOMER

- The technician will explain to the customer how the heater works and how to operate it.
- The customer must neither replace nor repair any parts.
- The user must call in a licensed authorized technician to carry out necessary routine maintenance on the heater at least once a year, before it is used for central heating.
- A routine maintenance contract, with a licensed authorized technician, will guarantee the heater works properly as well as ensuring a longer life.

Controlling Heater Operation

The customer must know how to fill and drain the circuit; he must also know how to control and correct if necessary the pressure in the central heating system.

What to do when:

the smell of gas is present-

Turn the gas cock off and ventilate the room. Call a licensed authorized technician and, if necessary your local gas company.
Follow the gas supplier's instructions - If you cannot reach your gas supplier; call the fire department.

the heater is heating up but the system stays cold-

Open the radiator taps and make sure that the heater temperature control knob is on the **150°F** position. If the system still does not warm up and the circulator pump is not working, turn the heater off and call a licensed authorized technician.

water is leaking from the domestic water side-

Turn off the main cold water supply valve. Call a licensed authorized technician.

Cleaning the heater jacket

Use a damp cloth. Do **not** use any abrasive detergents.

F SPARE PARTS

Ref. to fig. 1, 2, 3, and 4	Descriptions	P/N for BMS 10/20	P/N for BMS 15/29	P/N for BTS 10/20	P/N for BTS 15/29
6	Flue gas discharge fan	61901018	61901019	61901018	61901019
7	Automatic air vent	61206002	61206002	61206001	61206001
8	Thermostat bulb pocket	60108005	60108005	60108005	60108005
9	Gas valve service switch	60506019	60506019	-	-
10	Instrument panel	62630021	62630021	62630022	62630022
11	Temperature-pressure gauge	62115002	62115002	62115002	62115002
12	Failure lamp indicator	62116003	62116003	62116003	62116003
13	Ignition electrode	60505004	60505004	60505004	60505004
13a	Detection electrode	60505004	60505004	60505004	60505004
14	Burner	62604005	62604006	62604005	62604006
15	Gas manifold	62613018	62613017	62613018	62613017
17	Gas valve	61201025	61201025	61201025	61201025
18	High limit thermostat	62101029	62101029	62101029	62101029
19	Power and circulator pump switches	60506005	60506005	60506005	60506005
20	Domestic hot water priority thermostat	62101030	62101030	62101030	62101030
22	Heater temperature control	62101031	62101031	62101031	62101031
23	Electrical control board	60507021	60507021	60507021	60507021
24	Ignition module	62110026	62110026	62110026	62110026
26	Electrical Junction box	61101018	61101018	61101018	61101018
27	Expansion tank	62202001	62202001	62202002	62203001
28	Pressure switch	62113017	62113018	62113017	62113018
31	Turbulator	60416012	60416012	60416012	60416012
33	Central heating regulation valve	62607047	62607047	62607042	62607042
34	Circulator pump	62301025	62301025	62301025	62301025
35	Transformer	60510004	60510004	60510004	60510004
36	Low water cut-off	62113016	62113016	62113016	62113016
-	Conversion kit from natural gas to LP gas	62616401	62616402	62616401	62616402
-	Conversion kit from LP gas to natural gas	62616403	62616404	62616403	62616404
-	Safety relief valve	61205010	61205010	61205010	61205010
-	Heat exchanger	62602281	62602282	62602283	62602284

TAP4115CA

Spare parts are available from your local authorized wholesale distributor. For a location of the one nearest you call Embassy Industries, Inc. at 631-694-1800.


G TECHNICAL FEATURES

TABLE 1

		BMS 10/20	BMS 15/29	BTS 10/20	BTS 15/29
Country of destination		U.S. and Canada			
AGA and CSA certification number		114696-01			
Heating and Domestic nominal input rating	Btu/hr (kW)	87,000 (25.5)	107,000 (31.6)	87,000 (25.5)	107,000 (31.6)
Heating and Domestic nominal output heat	Btu/hr (kW)	72,220 (21.1)	88,800 (26)	72,220 (21.1)	88,800 (26)
AFUE ratings	%	84			
Combustion efficiency	%	87			
Supply natural gas pressure	in W.C. (mbar)	7 (17.4)			
Minimum supply natural gas pressure	in W.C. (mbar)	5.5 (8.7)			
Maximum supply natural gas pressure	in W.C. (mbar)	10.5 (24.9)			
Supply LP gas pressure	in W.C. (mbar)	11 (24.4)			
Minimum supply LP gas pressure	in W.C. (mbar)	10 (19.9)			
Maximum supply LP gas pressure	in W.C. (mbar)	13 (32.4)			
Manifold natural gas pressure	in W.C. (mbar)	3.5 (8.7)			
Manifold LP gas pressure	in W.C. (mbar)	8 (19.9)			
Burner natural gas flow rate	gal/hr (m3/h)	602 (2.28)	747 (2.83)	602 (2.28)	747 (2.83)
Burner LP gas flow rate	gal/hr (m3/h)	258 (0.98)	322 (1.22)	258 (0.98)	322 (1.22)
Unit burner number (injectors)	[n°]	10	11	10	11
Injectors natural gas diameter	[mm/100]	140	150	140	150
Injectors LP gas diameter	[mm/100]	105	115	105	115
Maximum heating temperature	°F (°C)	176 (80)			
Minimum heating temperature	°F (°C)	140 (60)			
Maximum heating pressure	PSI (bar)	30 (2.1)			
Minimum heating pressure	PSI (bar)	7.3 (0.5)			
Expansion tank	gal (lit.)	2.64 (10)	2.64 (10)	2.64 (10)	3.17 (12)
Maximum domestic temperature	°F (°C)	176 (80)			
Minimum domestic temperature	°F (°C)	104 (40)			
Maximum domestic pressure	PSI (bar)	150 (10.3)			
Minimum domestic pressure	PSI (bar)	1 (0.07)			
DHW output rise at 75°F (42°C)	gal/min (lit./min)	2 (7.3)	2.35 (8.9)	2 (7.3)	2.35 (8.9)
Electrical supply		115 V, 60 Hz			
Amperes less than	A	2			
Split vent air intake features					
Diameter	in (mm)	3.15 (80)			
Maximum length	ft (m)	20 (6)			
Minimum length	ft (m)	3 (0.3)			
Equivalent length of one 90° elbow	ft (m)	3 (0.9)			
Concentric vent air intake features					
Diameter air-intake tube	in (mm)	3.94 (100)			
Diameter flue discharge tube	in (mm)	2.36 (60)			
Maximum length coaxial tube	ft (m)	15 (4.5)			
Minimum length coaxial tube	ft (m)	3 (0.3)			
Equivalent length of one 90° elbow	ft (m)	3 (0.9)			
Flue temperature	°F (°C)	266 (130)			
Dimensions					
Height (H)	in (mm)	34.6 (880)	34.6 (880)	35.6 (905)	35.6 (905)
Width (L)	in (mm)	18.1 (460)	19.3 (490)	16.7 (425)	16.7 (425)
Depth (P)	in (mm)	15 (380)	16.1 (410)	24.6 (625)	24.6 (625)

G TECHNICAL FEATURES

Curve of residual head for central heating system

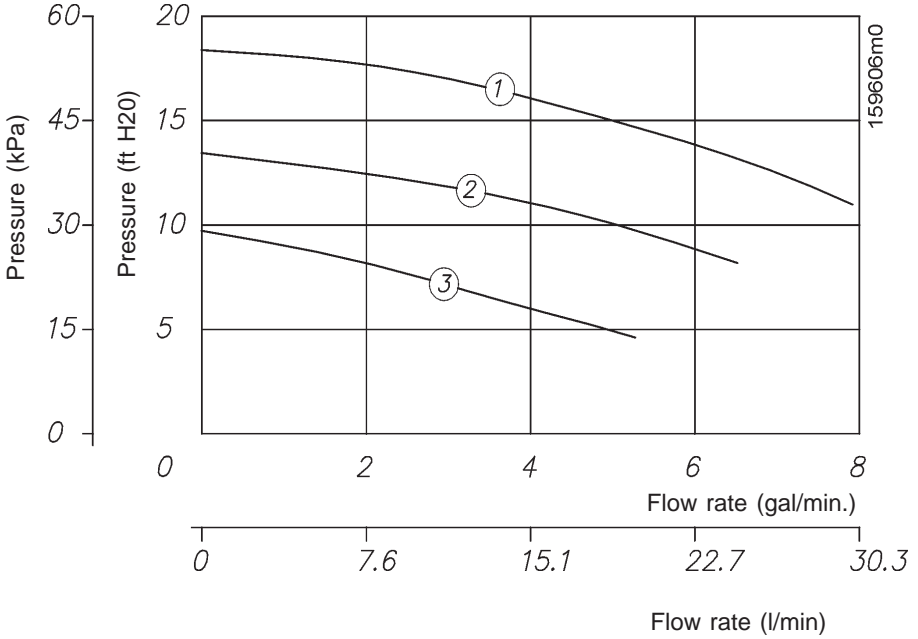

FOR TECHNICAL SUPPORT CALL:



Embassy Industries, Inc.
300 Smith Street
Farmingdale, NY 11735
PH - 631-694-1800
Fax - 631-694-1832
www.embassyind.com
sales@embassyind.com

MANUFACTURED BY:



COSMOGAS s.r.l.
Via L. da Vinci 16 - 47014
MELDOLA (FC) ITALY
info@cosmogas.com
www.cosmogas.com

